


John Lewis

Anton Wide Shelving

Stock number: 862 78501

862 78503

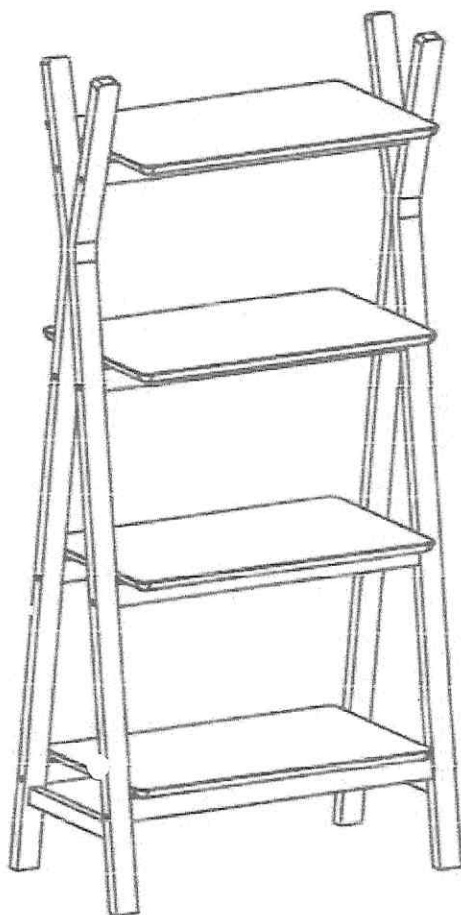

H179 W100 D40cm

Thank you for purchasing the Anton shelving. Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

At John Lewis, we are committed to making great products possible.

From our in-house Design Team, to our Buyers, we work together to bring great designs to life.

Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell.

We are all committed to designing and developing products to the highest industry standards.

We hope you are happy with your product and welcome any feedback or comments you may have.

The John Lewis Team


Tools required



Time to assemble

1 Hour

People to assemble

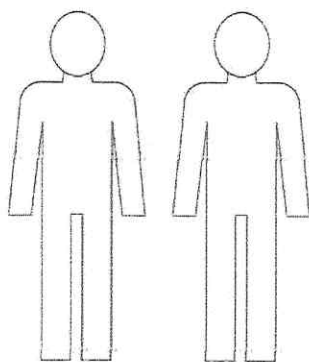

Important safety information

Warnings







- ⚠ The product should only be used on firm, level ground.
- ⚠ Keep small parts out of reach of children.
- ⚠ Ensure the product is fully assembled as illustrated before use.

Do's


- ✓ Check the pack and make sure you have all the parts listed.
- ✓ Check all screws or bolts are tightened and inspect regularly.
- ✓ Make sure the legs remain in contact with the ground at all times.

Don'ts

- ✗ Do not over tighten screws or bolts.
- ✗ Do not stand on the product.
- ✗ Do not use power tools to construct as overtightening and panel failure may occur.

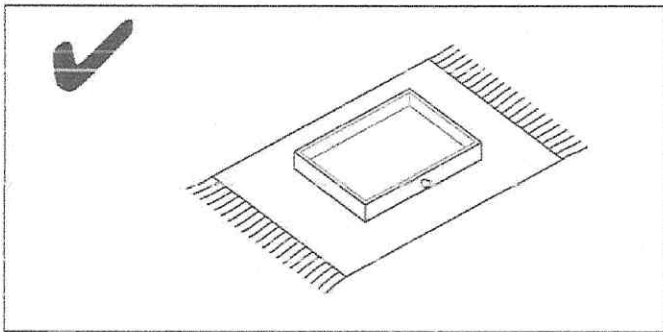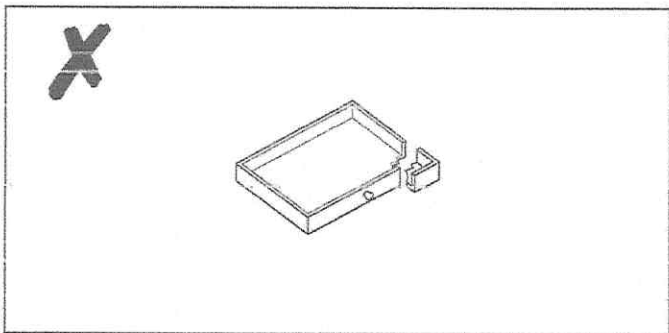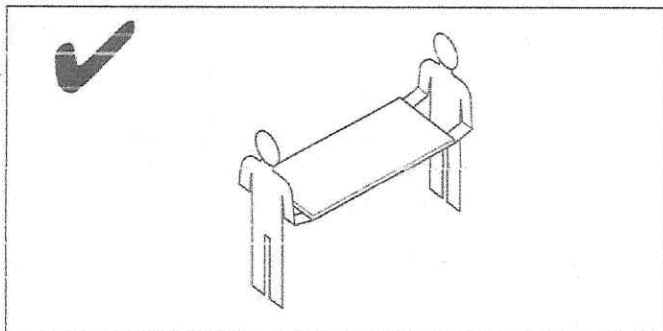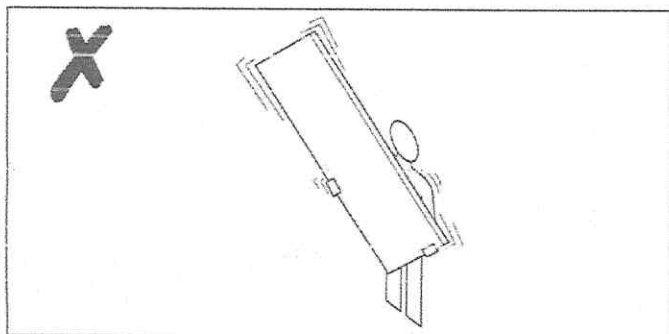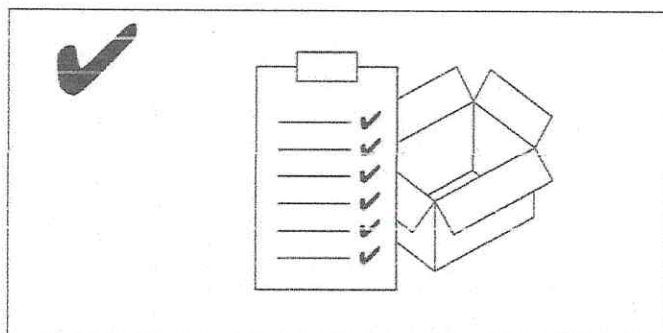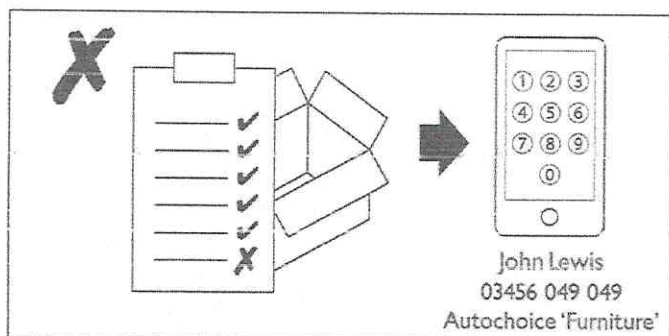


Your shelving

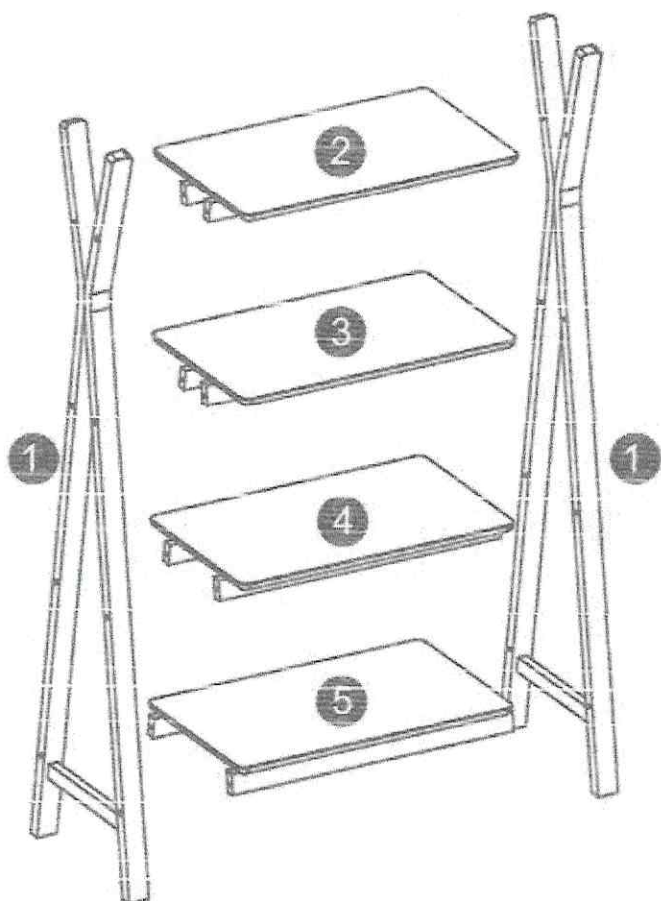



Ref	Description	Dimensions	Qty
①	Leg	1790x50x28mm	2
②	Top shelf	1000x405x70mm	1
③	2nd shelf	1000x405x70mm	1
④	3rd shelf	1000x405x70mm	1
⑤	Bottom shelf	1000x405x70mm	1

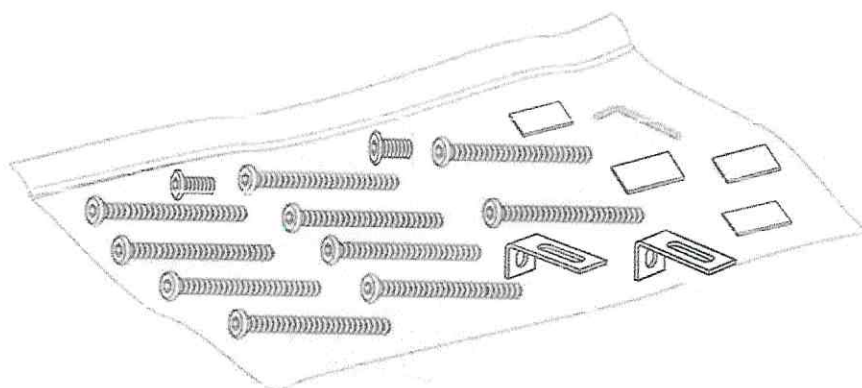


Fixtures and fittings

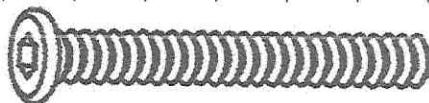

Fixtures and fittings
supplied (actual size)

Ref	Description	Dimension	Qty	mm
A	Leg bolt	M6x60mm	16	
B	Wall fix 'L' bracket bolt	M6x20mm	2	

Fixtures and fittings
supplied (not actual size)

Ref	Description	Dimension	Qty	
C	Pad	40x25mm	4	
D	Allen Key M4	4x60mm	1	
E	Wall fix 'L' bracket	85x18x21mm	2	

Internal dimensions

Stock number: 862 78501
862 78503

Shelving overall size: 179x100cm
Shelf size: W100 D40,5cm

Product assembly

Anton shelving
862 78501/78503


Step 1

Parts, fittings and tools



Connect the four shelves to one of the two legs as shown.
The bolts are not completely tightened at this stage.


8x

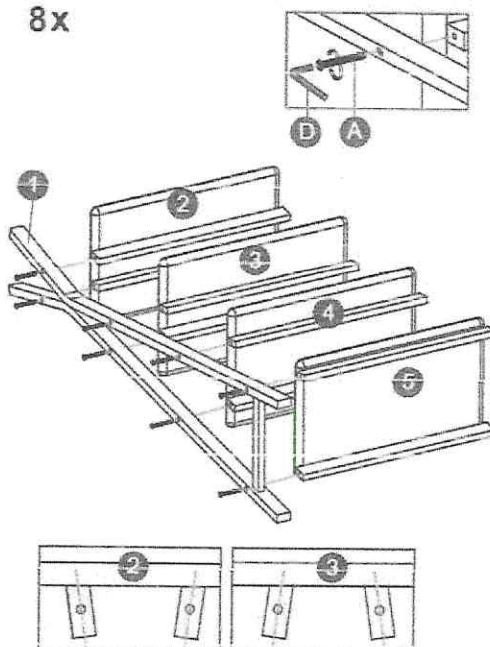

Please note these diagrams showing how to identify the top shelf (part 2) from the second shelf (part 3).

Step 2

Parts, fittings and tools

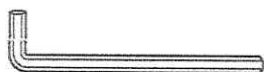


Connect the other leg to the shelves as shown.

Bolts A are loosely tightened clockwise using allen key D provided.


Please note that all bolts should not be tightened completely until the unit is standing up.

8x

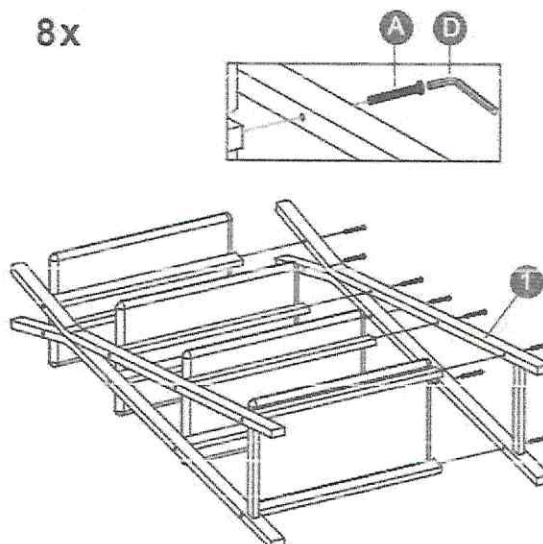

Step 3

Fittings

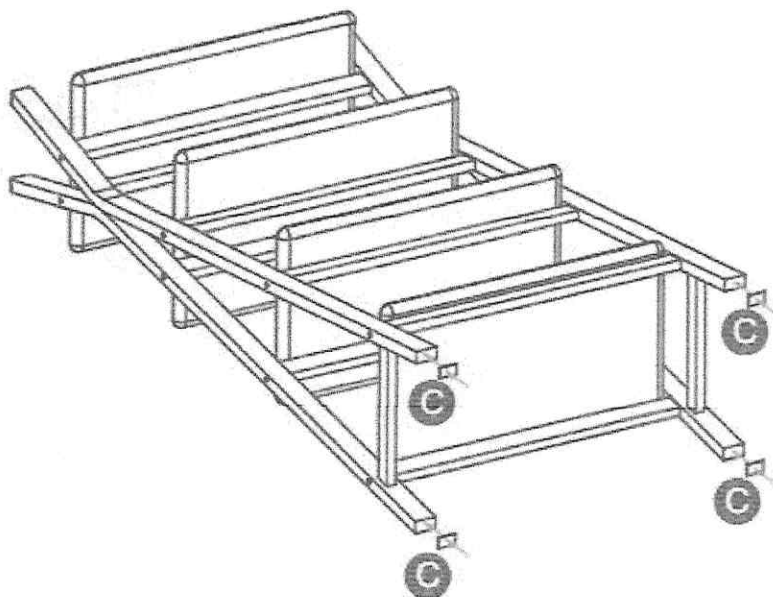


Step 4

Tools



Now stand the unit up and tighten all bolts clockwise.

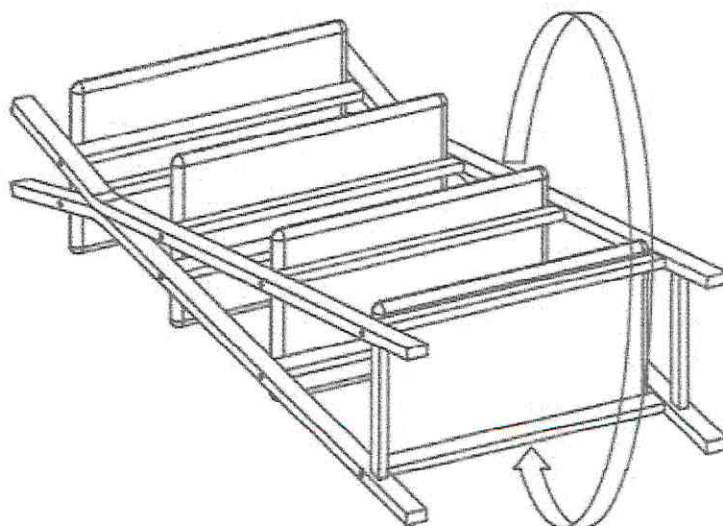

Step 5 – wall fixing

Parts, fittings and tools

B E D






Using screws provided attach the 'L' shaped brackets to the underside of the second shelf. Attach the brackets to the wall using the correct wall fixing (see page 9).



Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent this furniture tipping over, it must be permanently fixed to the wall.

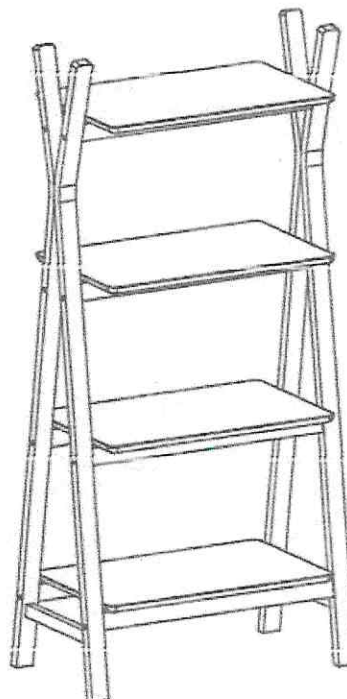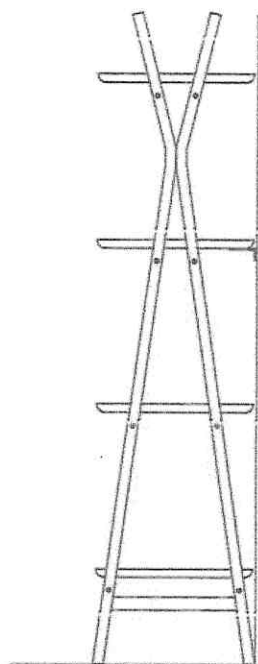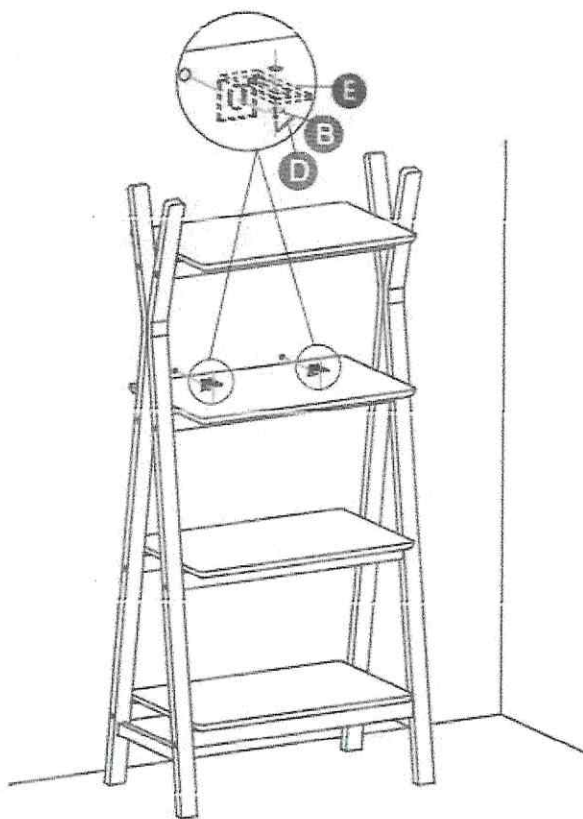

A guide to wall mounting and fixings







Warning



In order to prevent overturning this product must be used with the wall attachment device provided. Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Installation shall be carried out exactly according to the instructions provided – otherwise a safety risk can occur if incorrectly installed. Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.

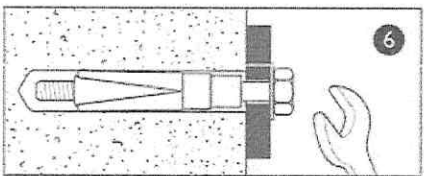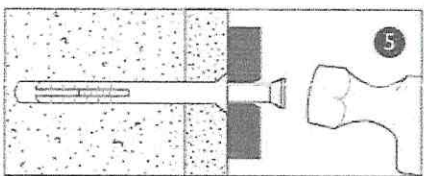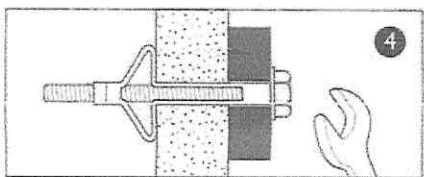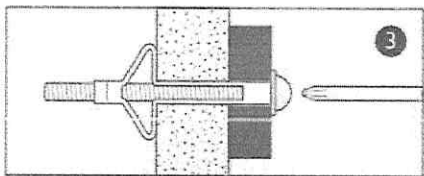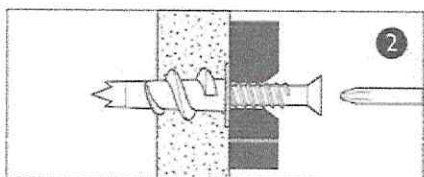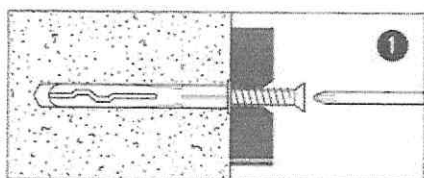

Types of walls

You can use one of the following types of wall plug if your wall is made of brick, breezeblock, concrete, stone or wood.

1. General purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general – purpose wall plugs can be used.

2. Plasterboard wall plugs

For use when attaching light loads on to a plasterboard partitions.

3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

4. Cavity fixing – Heavy Duty wall plug

For use when fixing or supporting heavy loads such as shelving, wall cabinets and coat racks.

5. Hammer fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

6. Shield Anchor wall plug – Heavy Loads

For use with heavier loads such as TV and Hi-Fi speakers and satellite dishes etc.

Care and maintenance



Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

Care guide

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on flat surfaces, such as table tops and drawer fronts by the way the slivers are arranged.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a paint or hard lacquer should be dusted with a dry cloth.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters. Wipe up spills immediately and ensure that a mat or pad is placed under paper if you are writing.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping

Safety instructions

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Retain these instructions for future reference.