


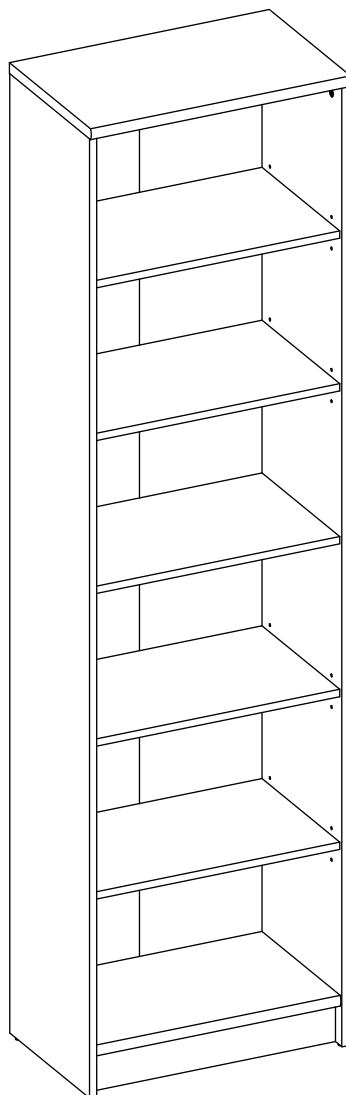
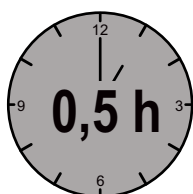


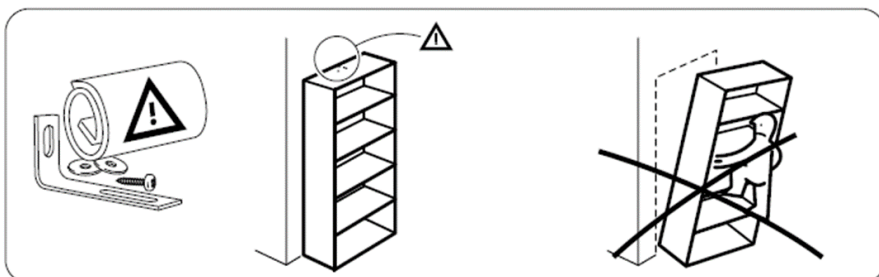





12x T02	12x T01	16x D01	1x F01	1x F11	18x R01
12x E01	5x S01	1 x P01	2 x W07	4x E08	4x W02

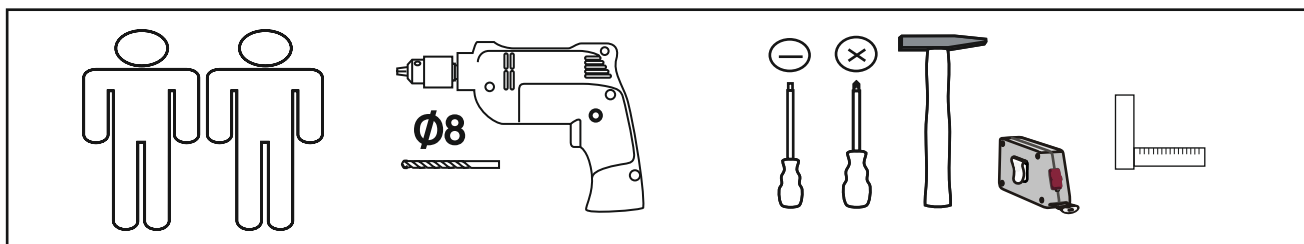


NR	DIM	QTE	COLLI
1A	1953x333x15	1	1/1
2A	1953x333x15	1	1/1
3A	540x340x22	1	1/1
4A	509x328x22	1	1/1
5A	1870x528x2	1	1/1
6	509x80x15	1	1/1
7A	509x304x15	4	1/1
8A	509x304x22	1	1/1

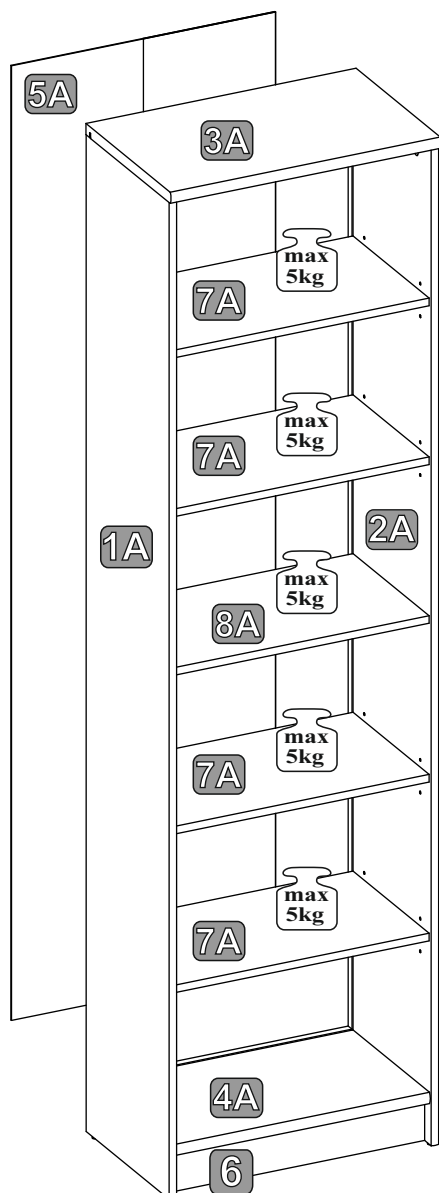


1

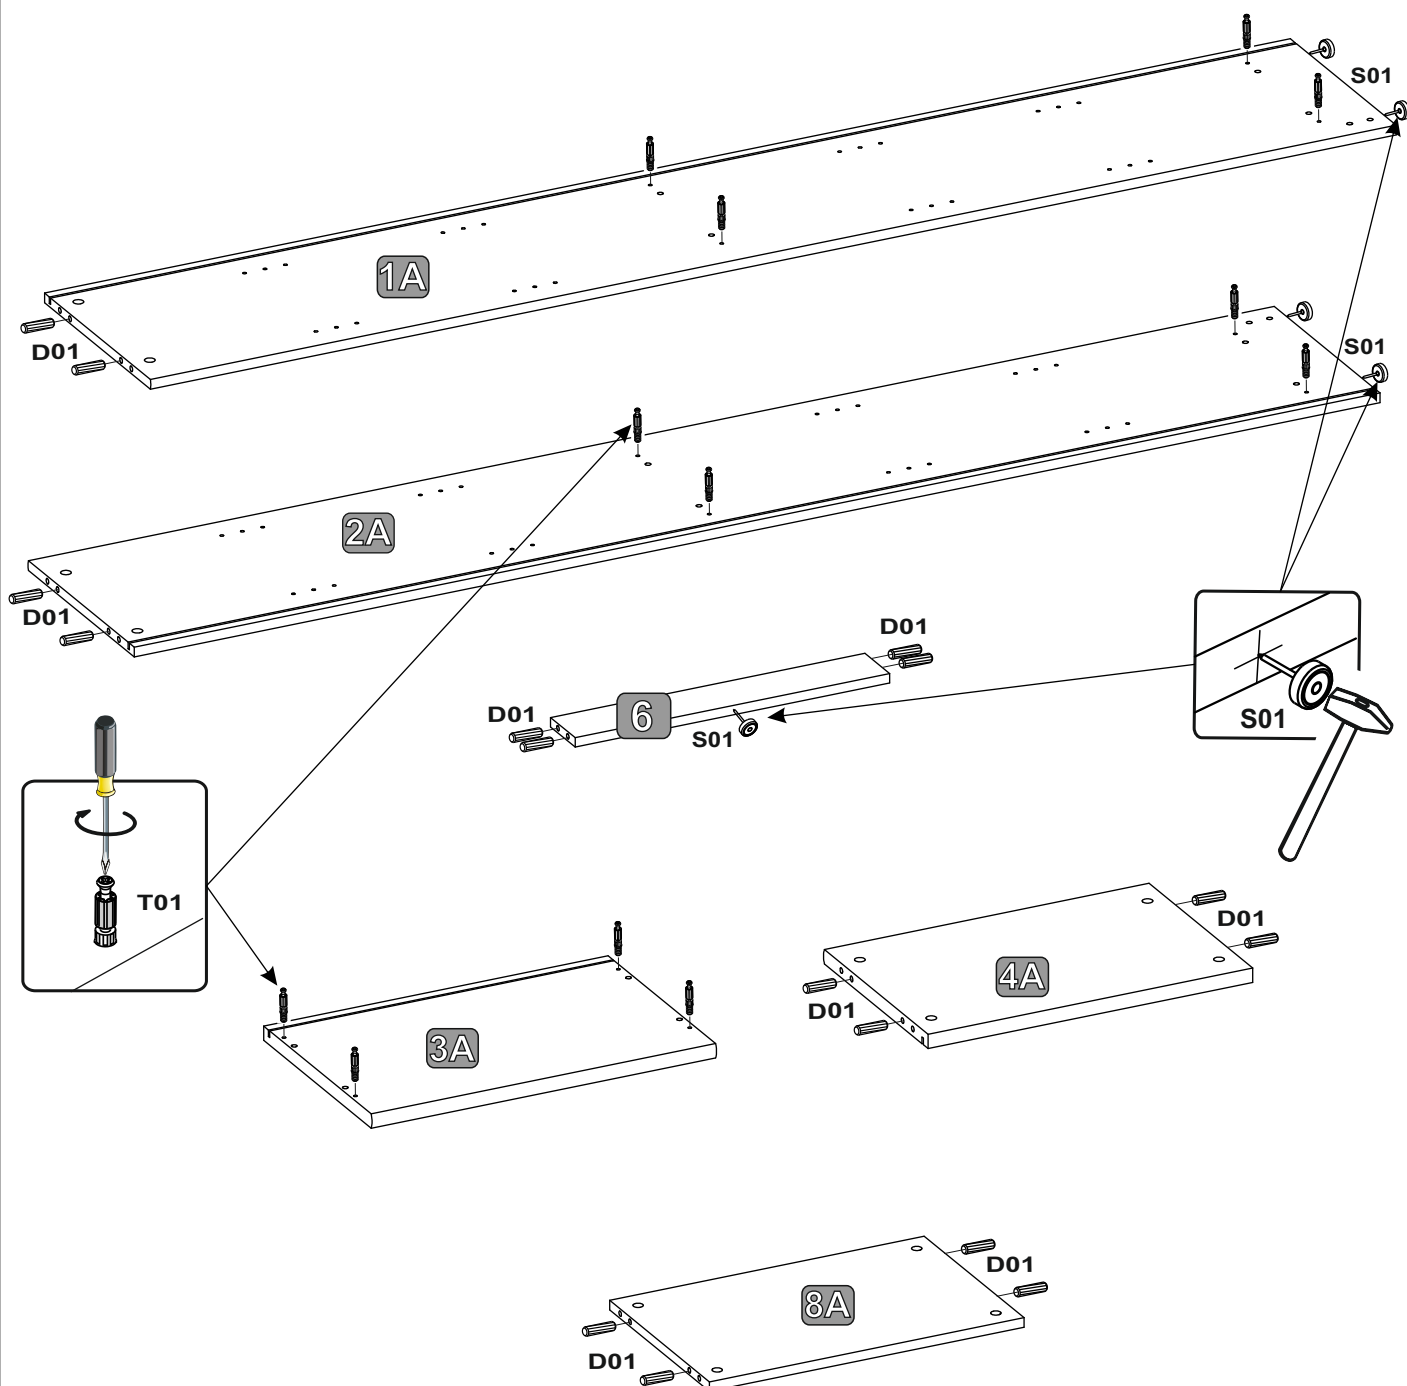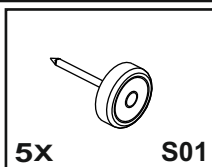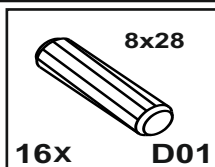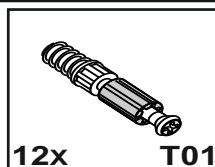





2

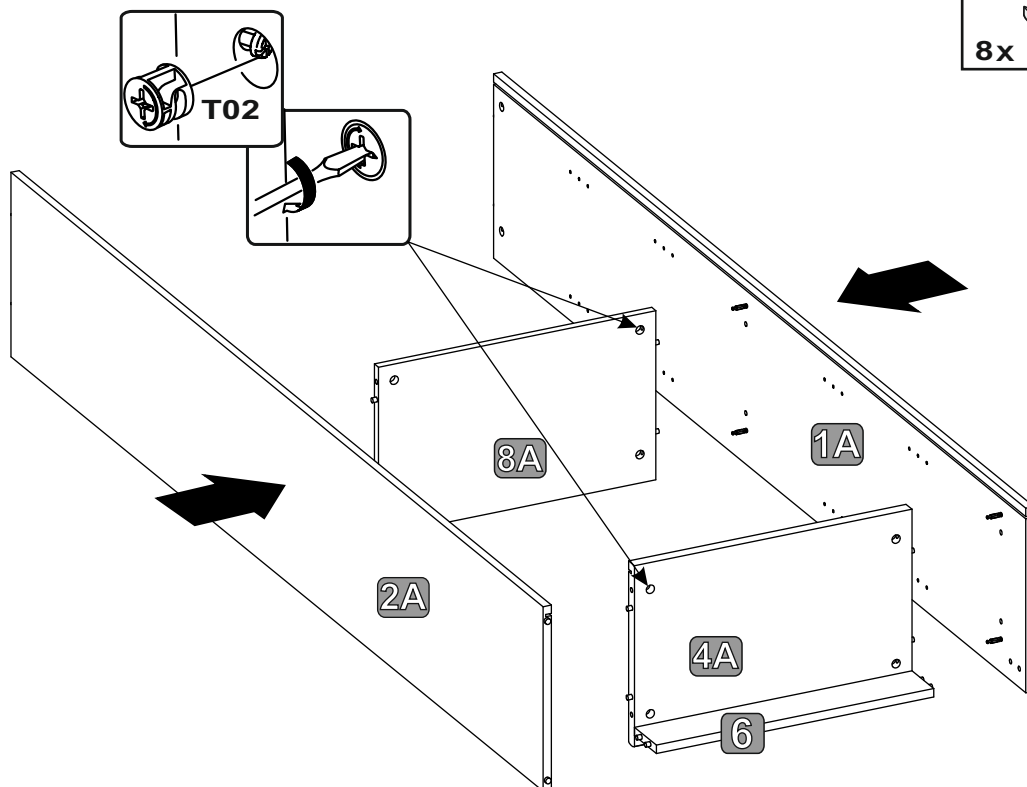


3

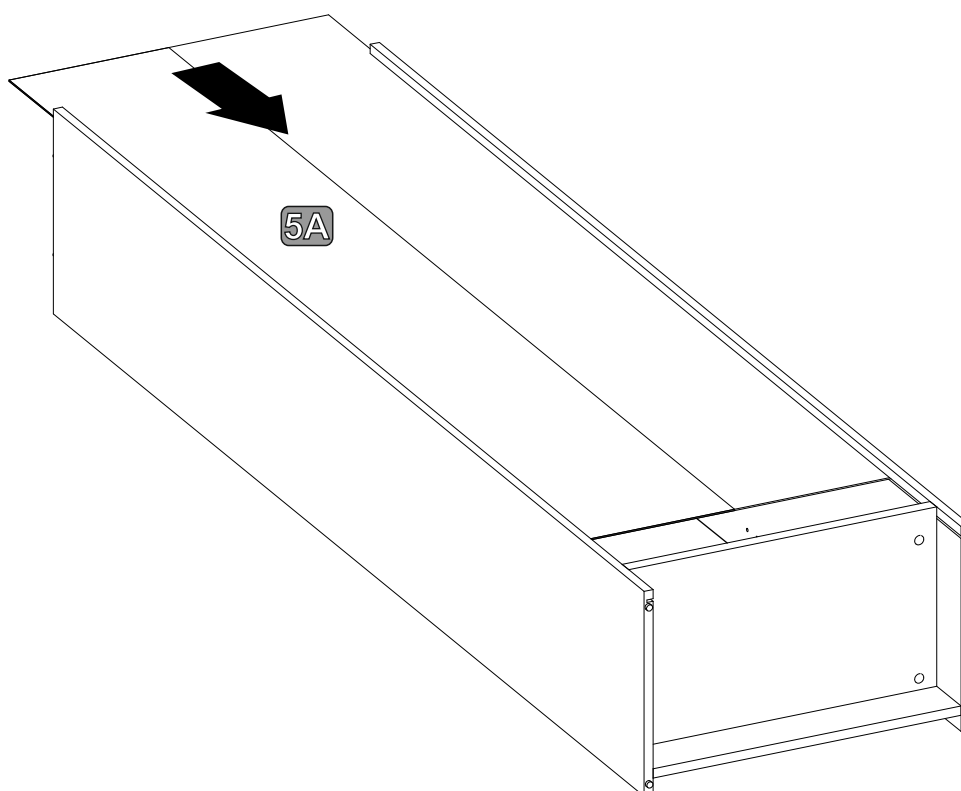



4

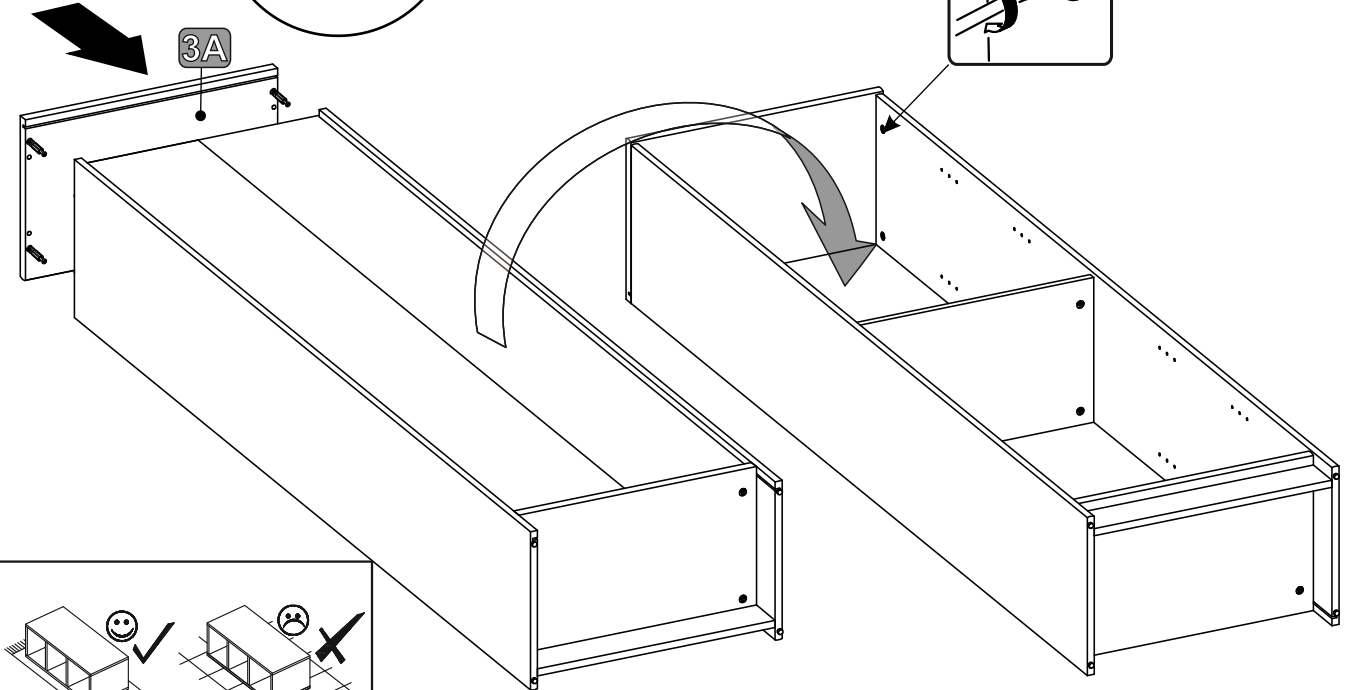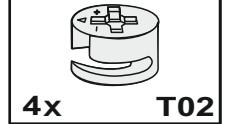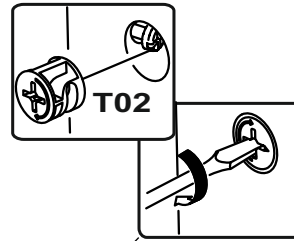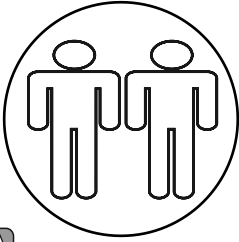

5






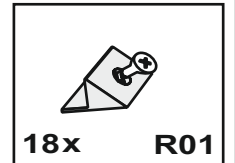


A=B

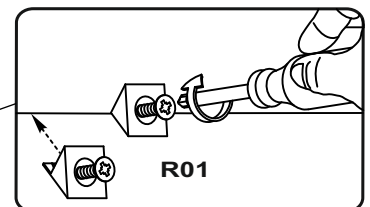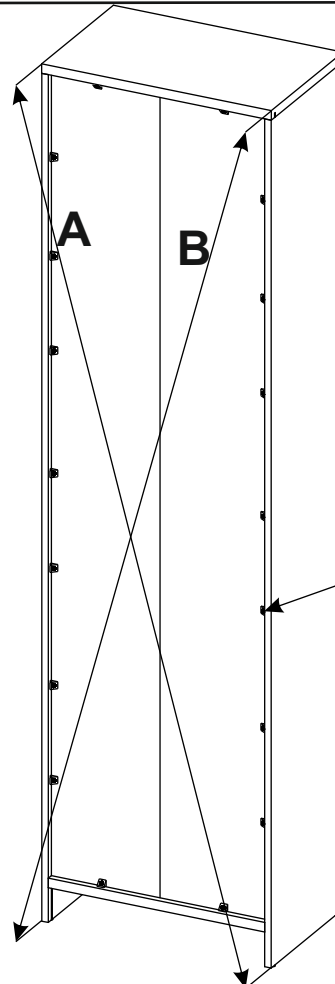



6

			
2x W07	1x P01	1x F11	1x F01

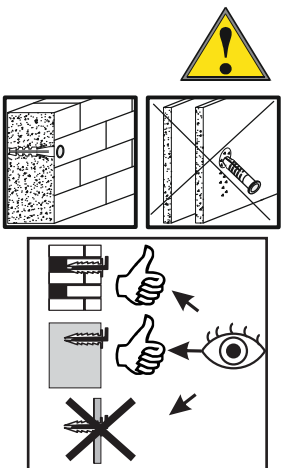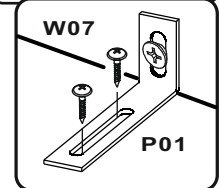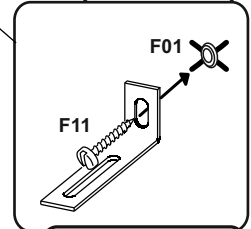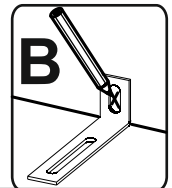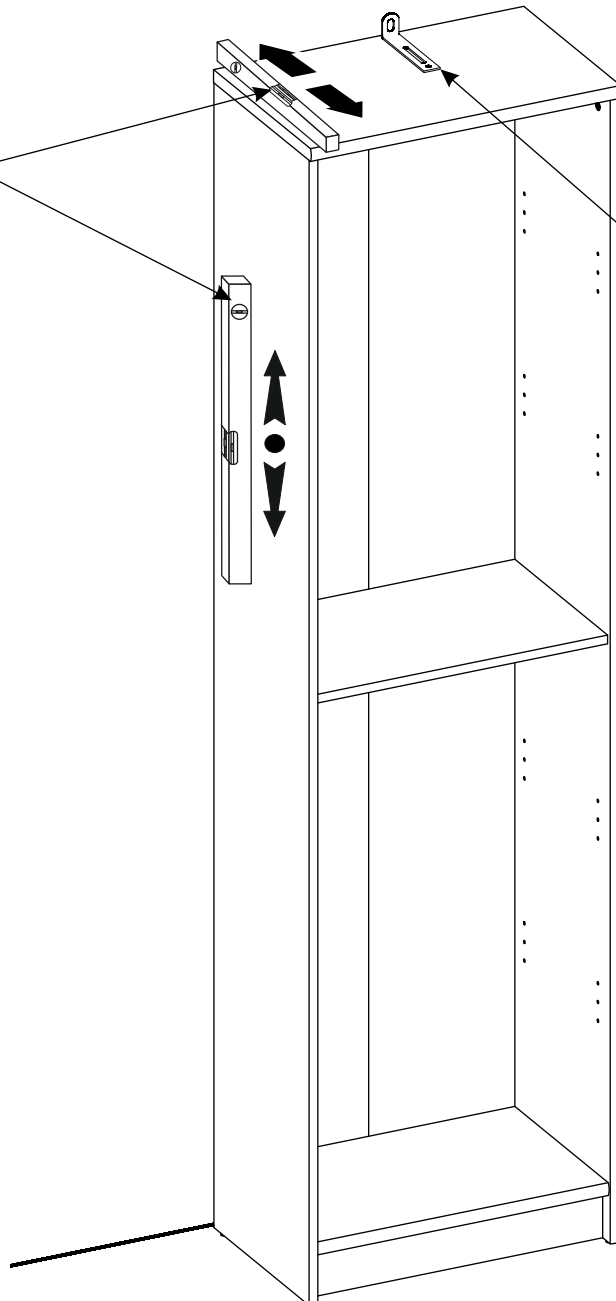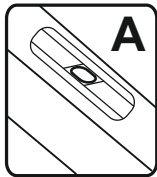

7

12x

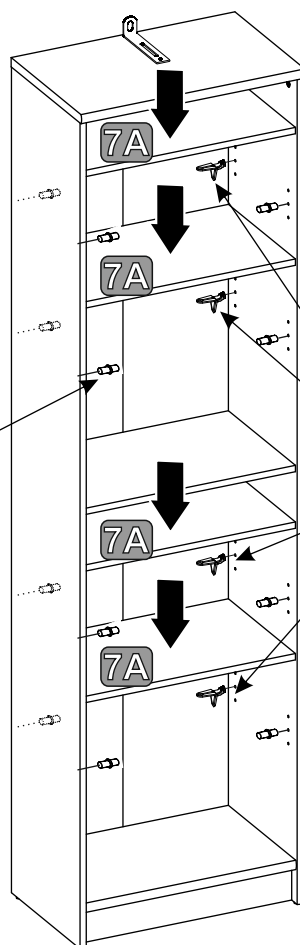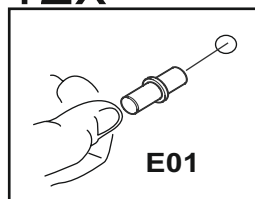


4x

E08


12x

E01

4x

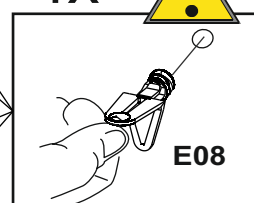

8

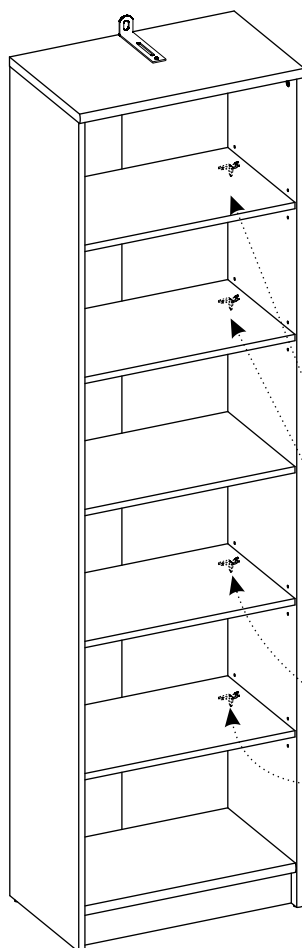

3x13



4x

W02

