
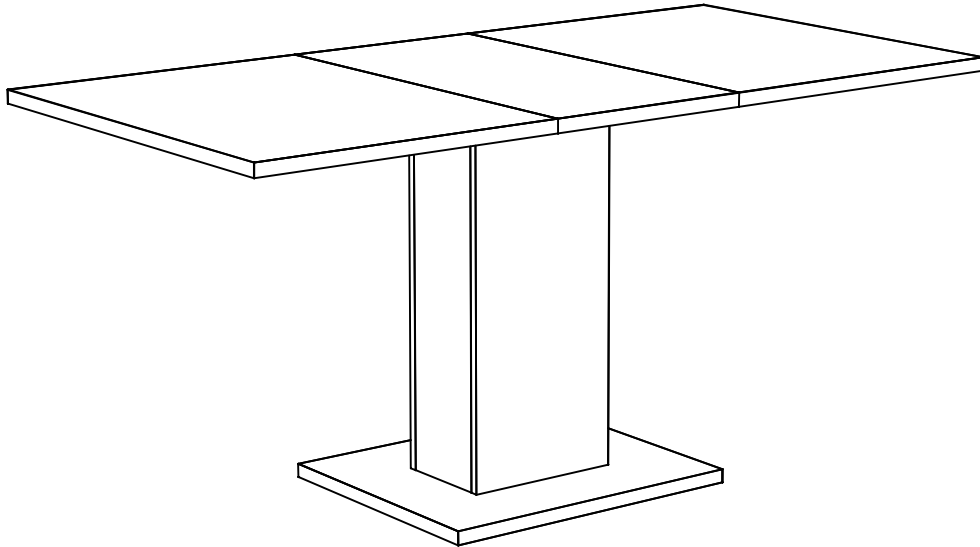


REPC-Nr.:

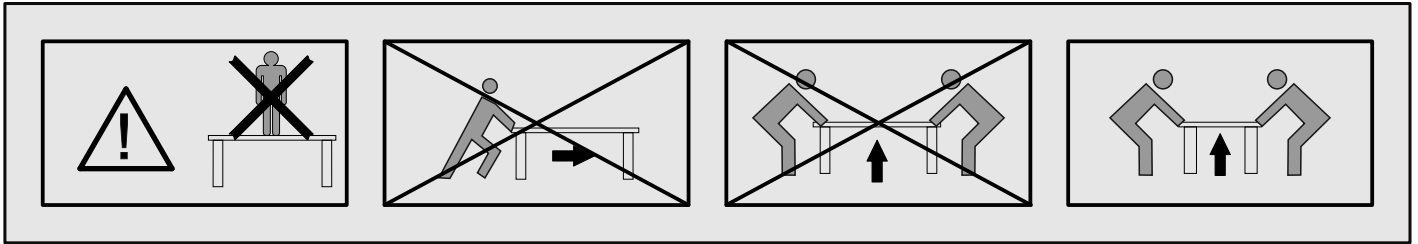


Artikel.-Nr.:

0562_120x80

Montageanleitung.-Nr.:




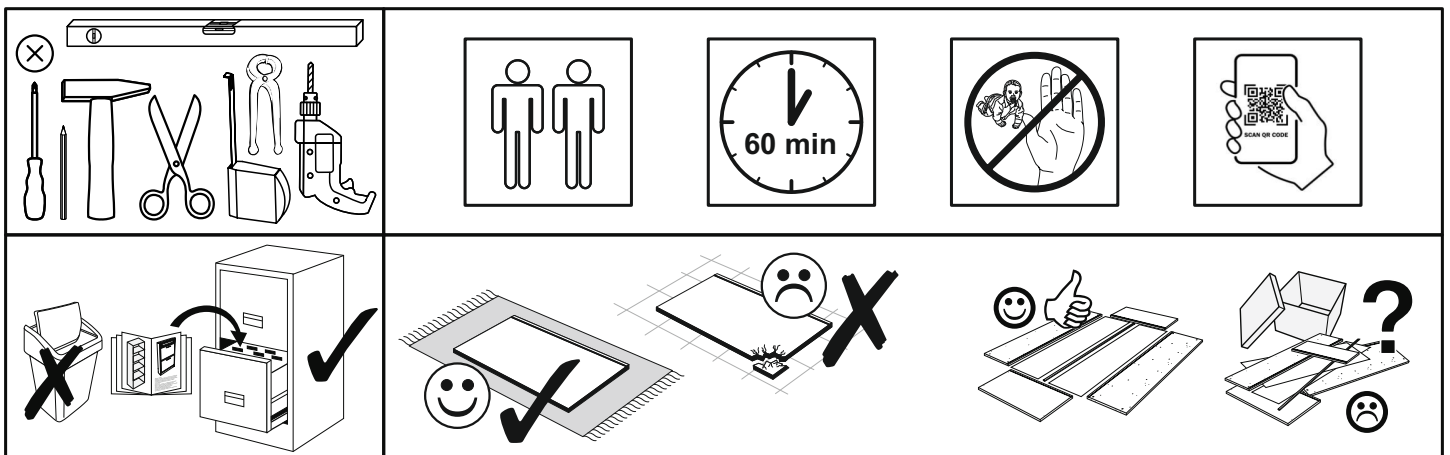









MA1-00495



SCAN ME

Das Ersatzteil-Anforderungsformular finden Sie auf
The replacement parts requisition form you find on
<https://www.maeusbacher.de/ersatzteile/>



BT1-00582 Colli 1/2


B01-20	 7,0x70	B02-10	 ø15x12mm	B02-20		B01-30	 3x16	B01-39-20	 5x20
6x		18x		18x		2x		12x	
B02-103	 8x30	B05-130	 Leim	B01-242	 SW 6	B01-360	 M6	B02-183	 M6x20
20x		6x		1x		4x		4x	
B01-90	 3,5x20	B02-211		B02-212					
12x		6x		6x					




▶ SCAN ME

BT1-00583 Colli 1/2



B02-177		B05-20	
2x		6x	




Colli 1/2

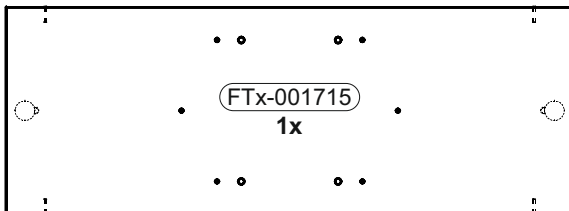


750 x 274

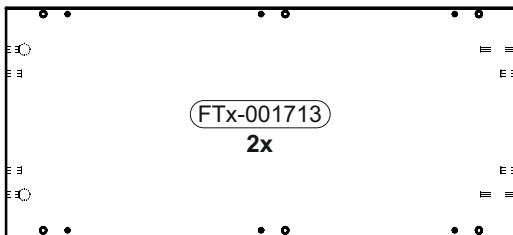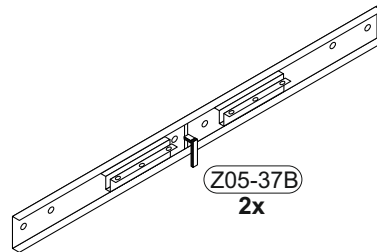

674 x 302

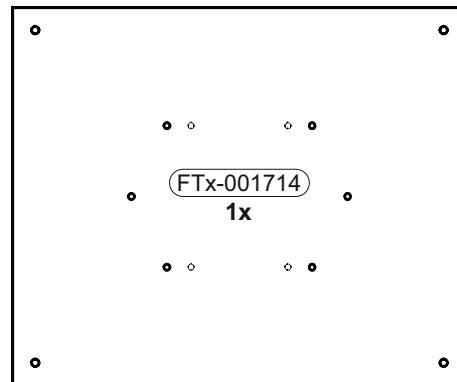


600 x 500

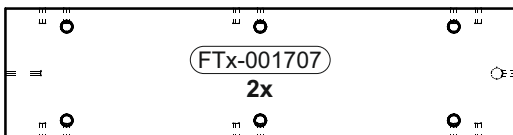


674 x 172




Colli 2/2



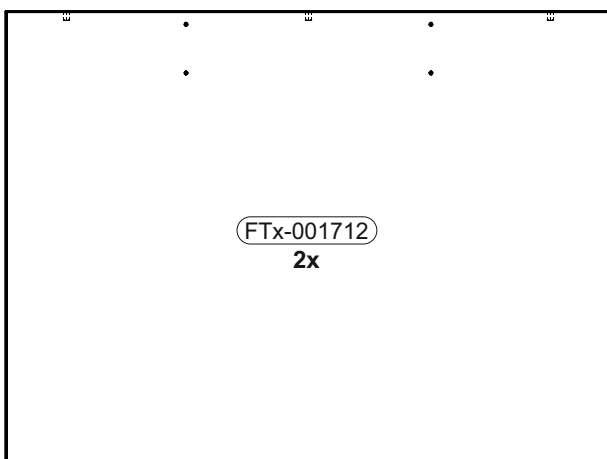







800 x 600




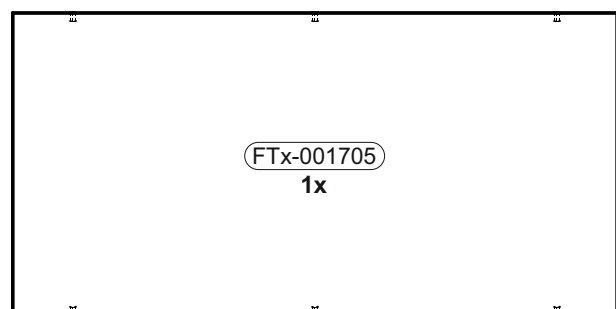


800 x 400

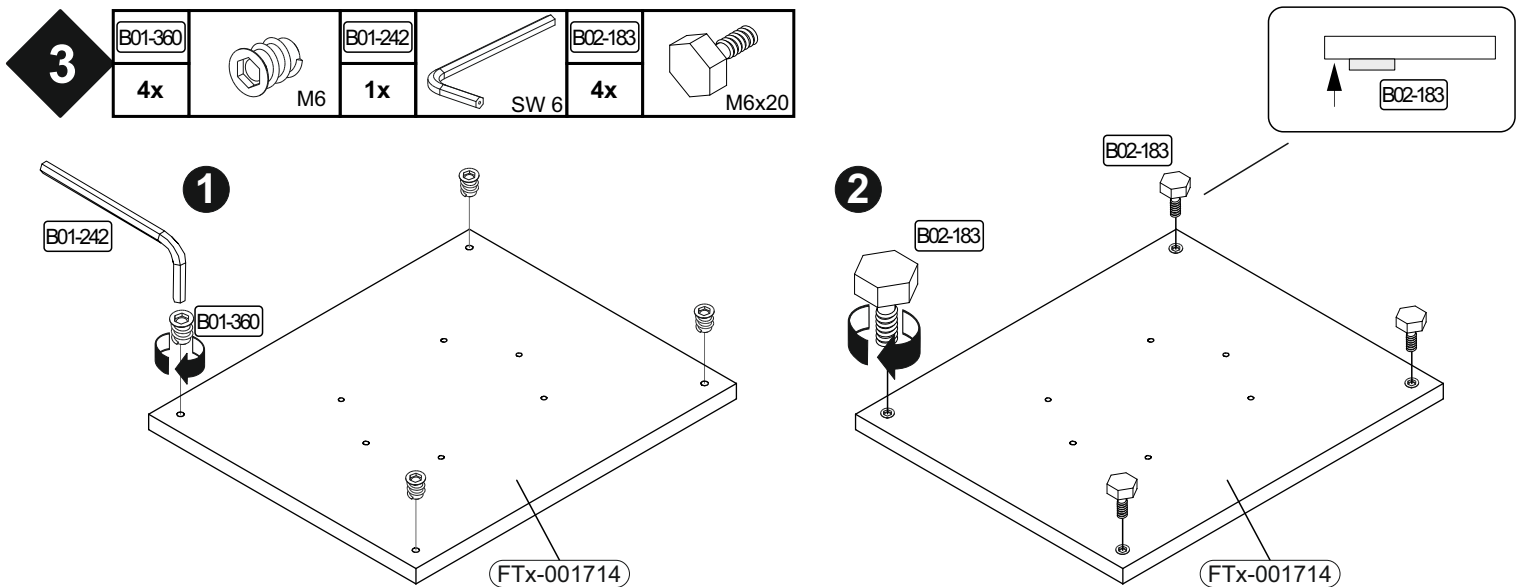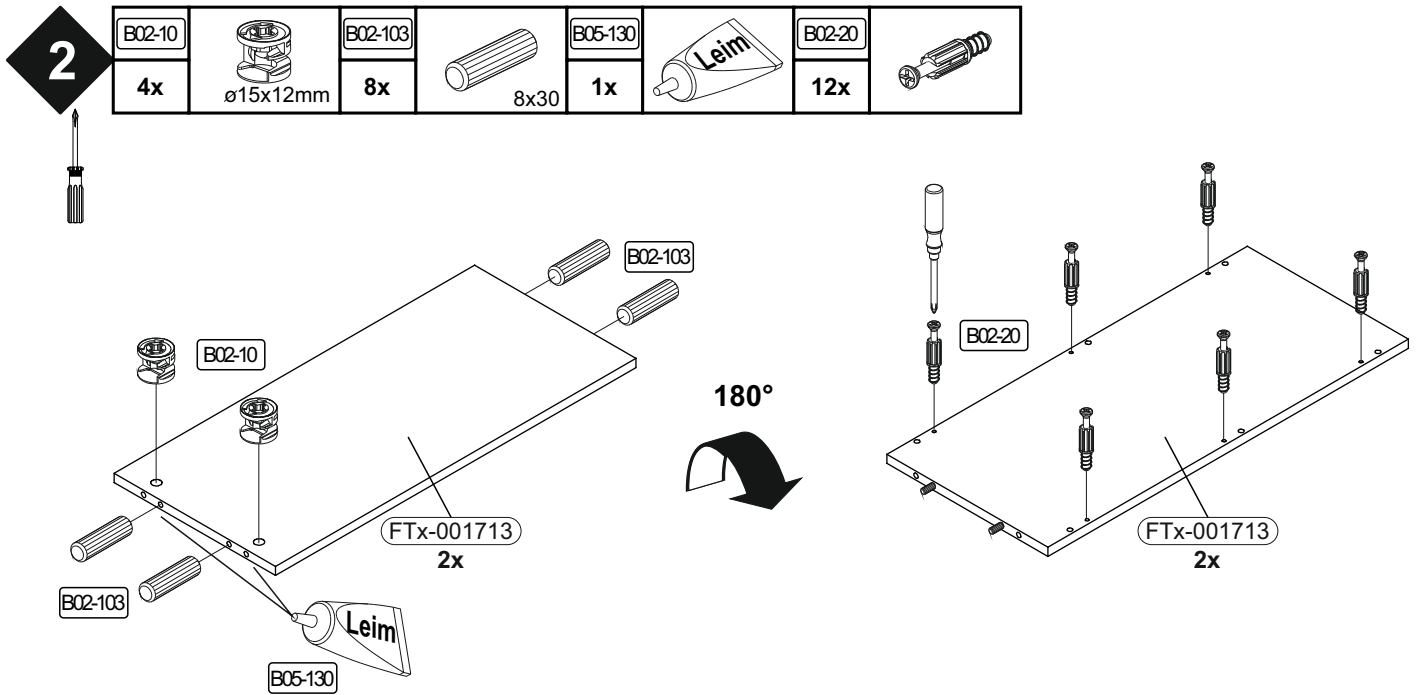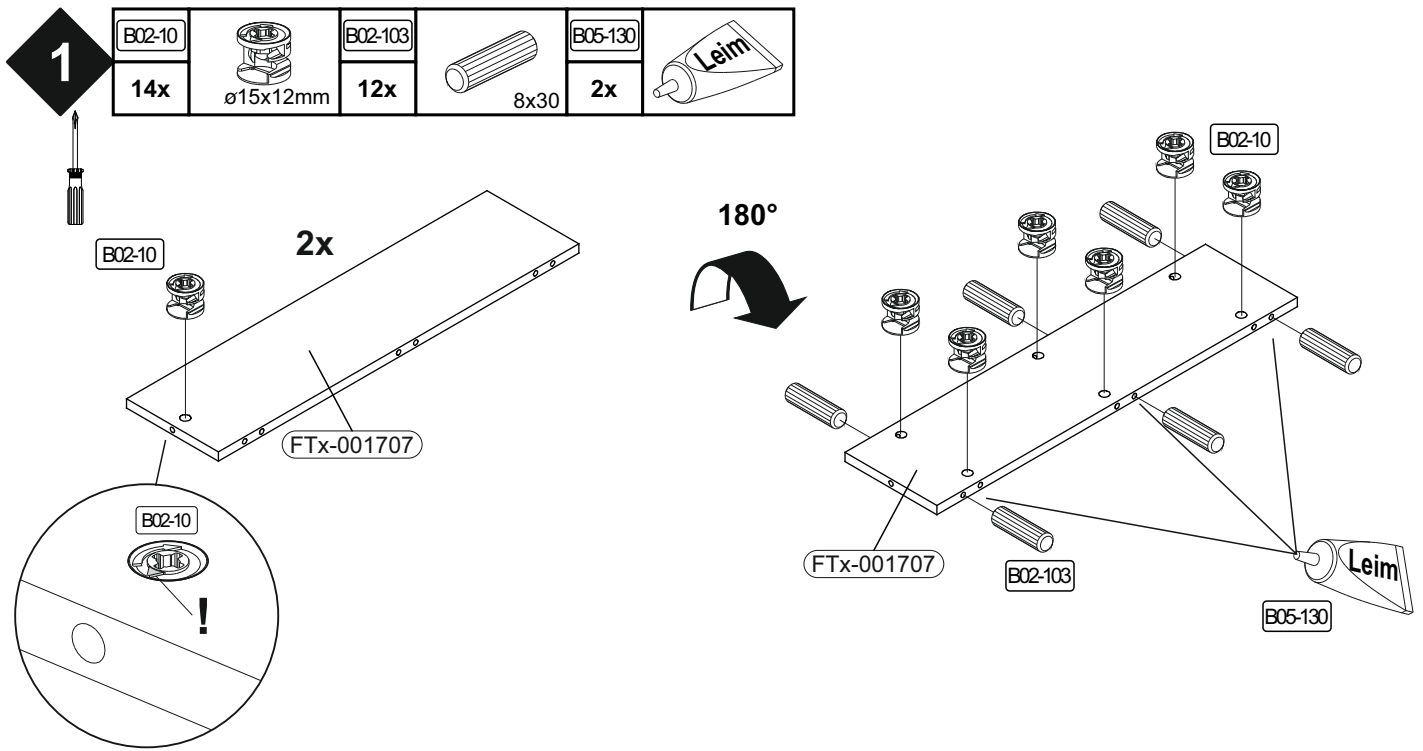

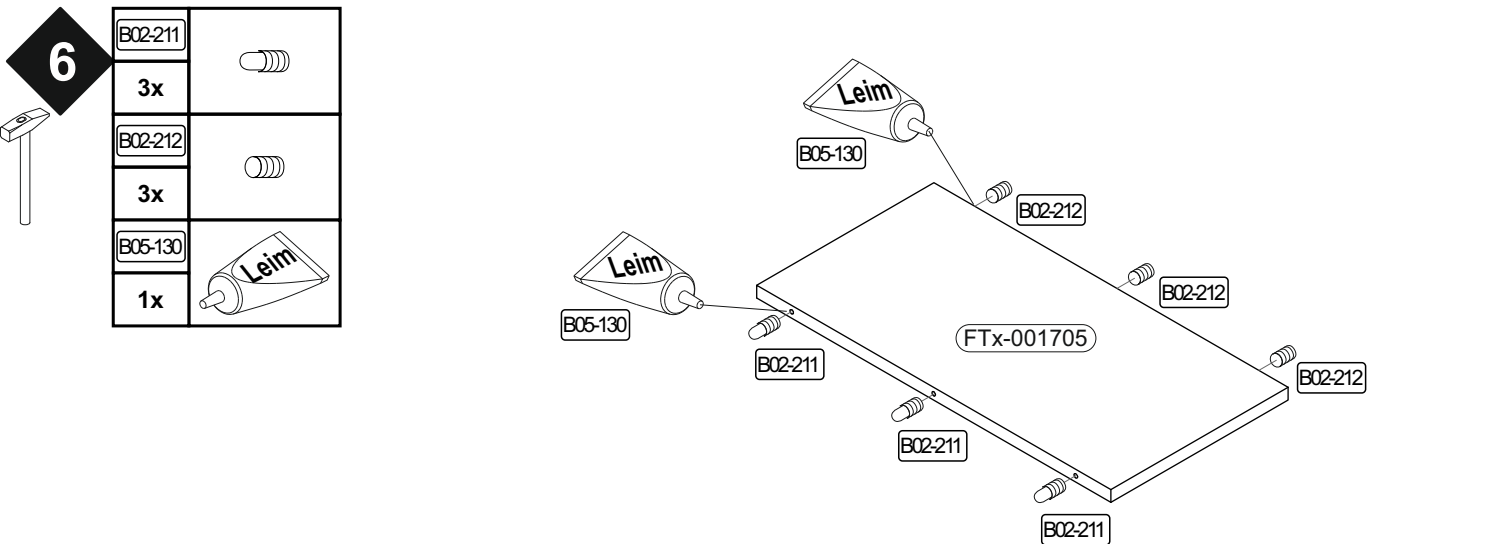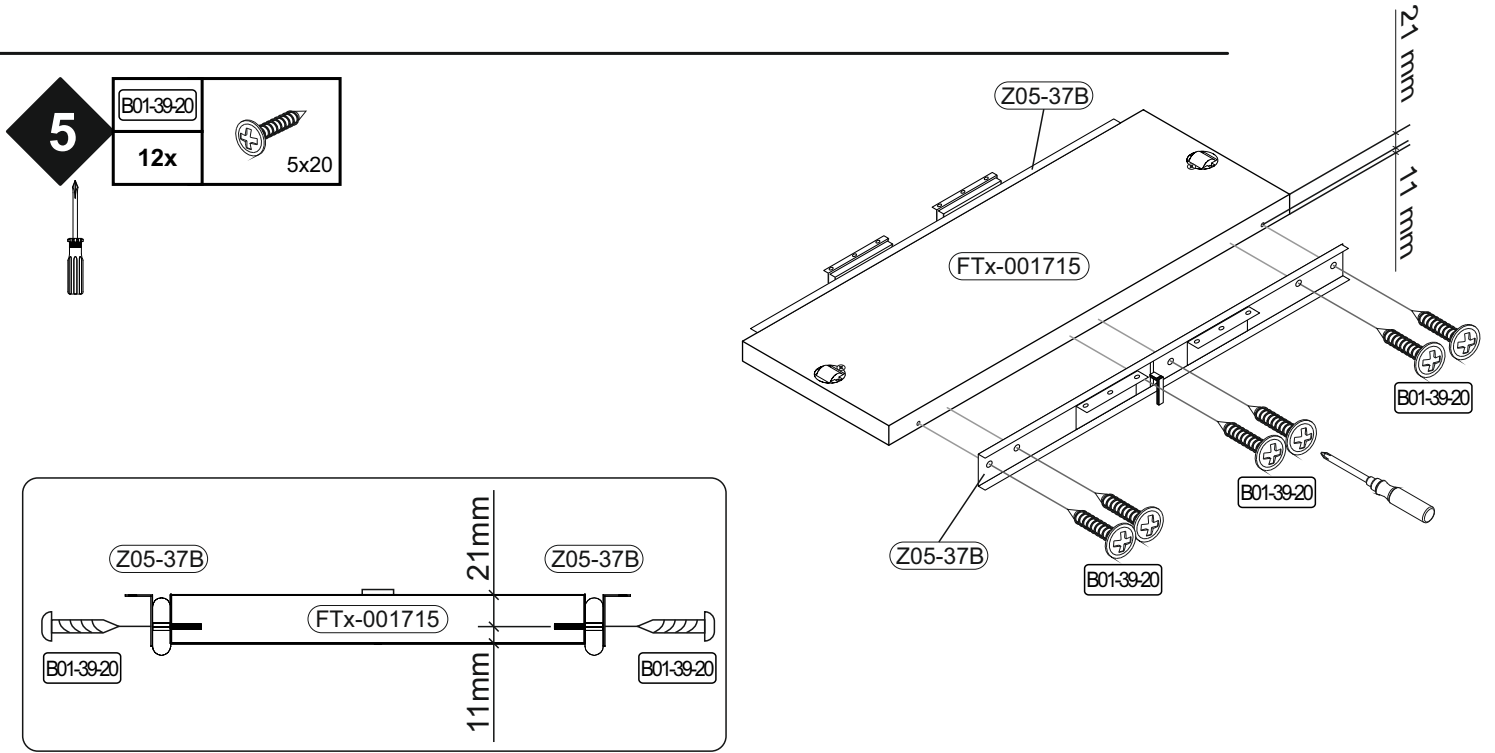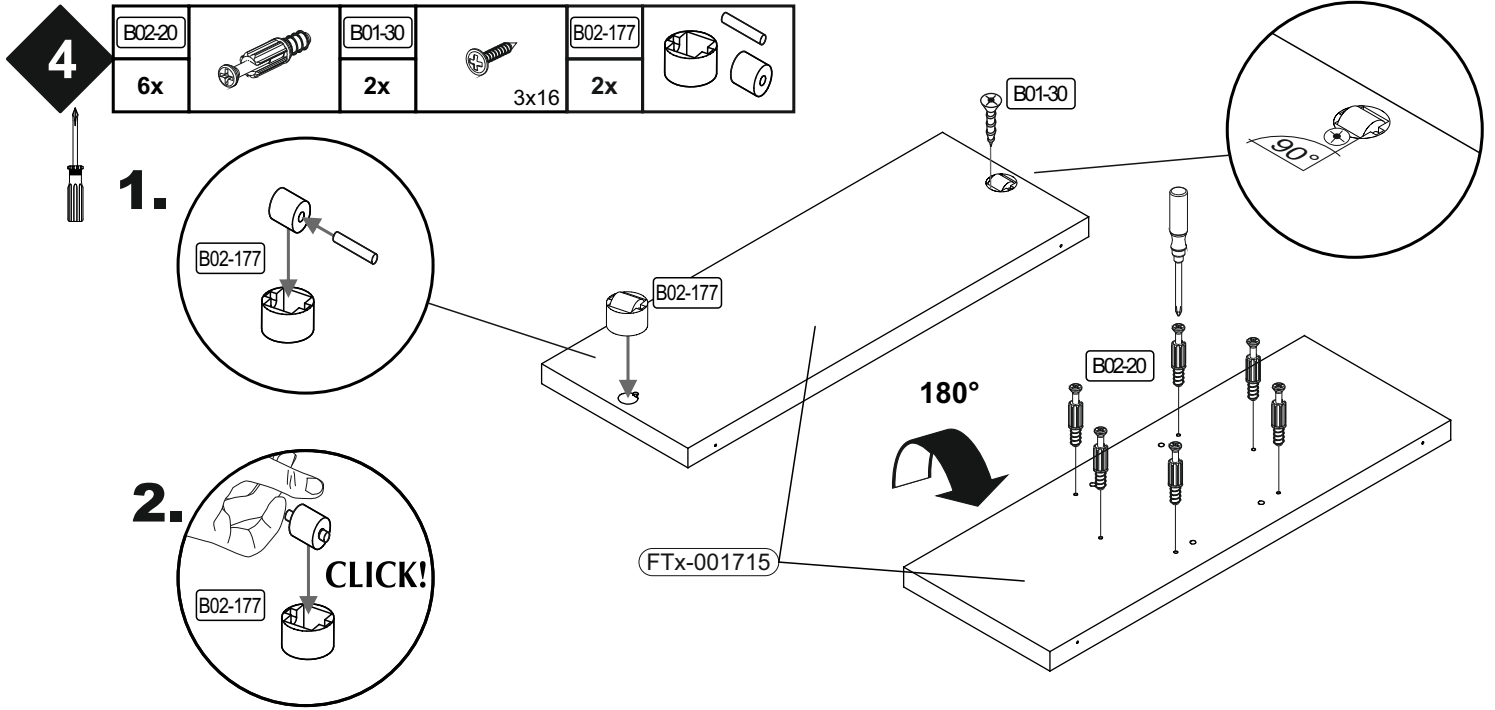

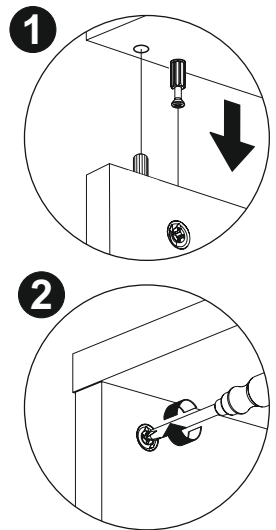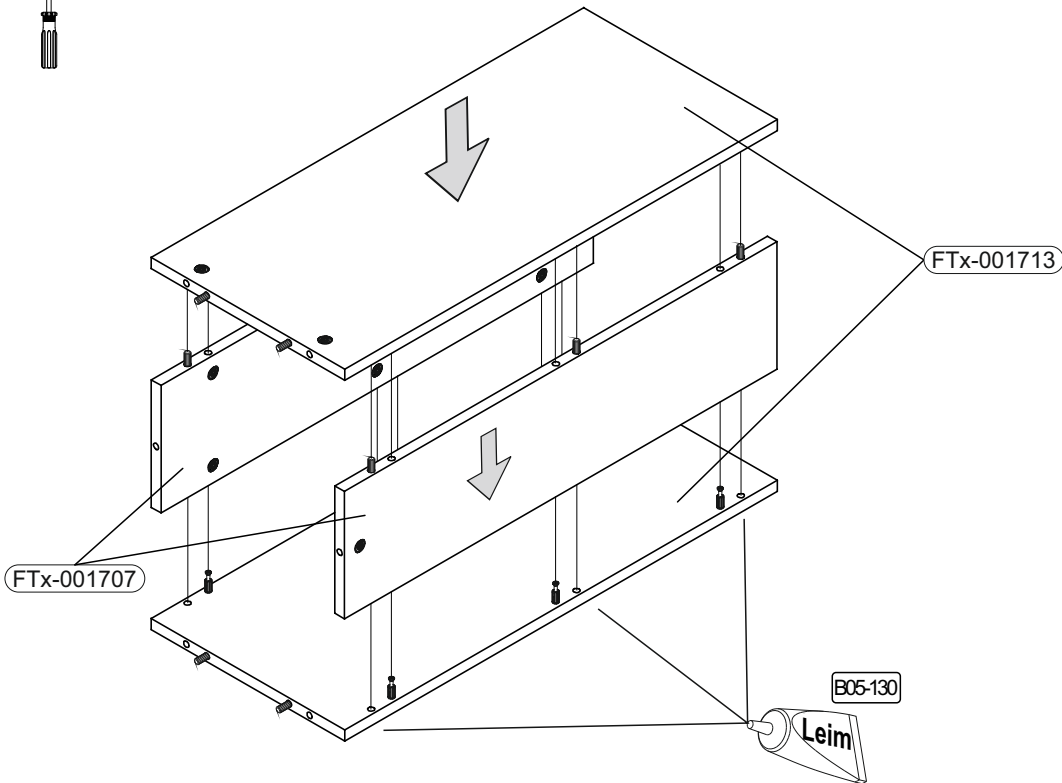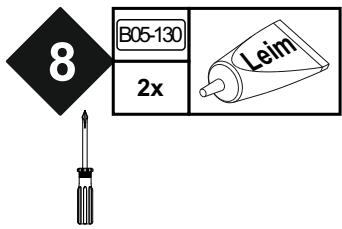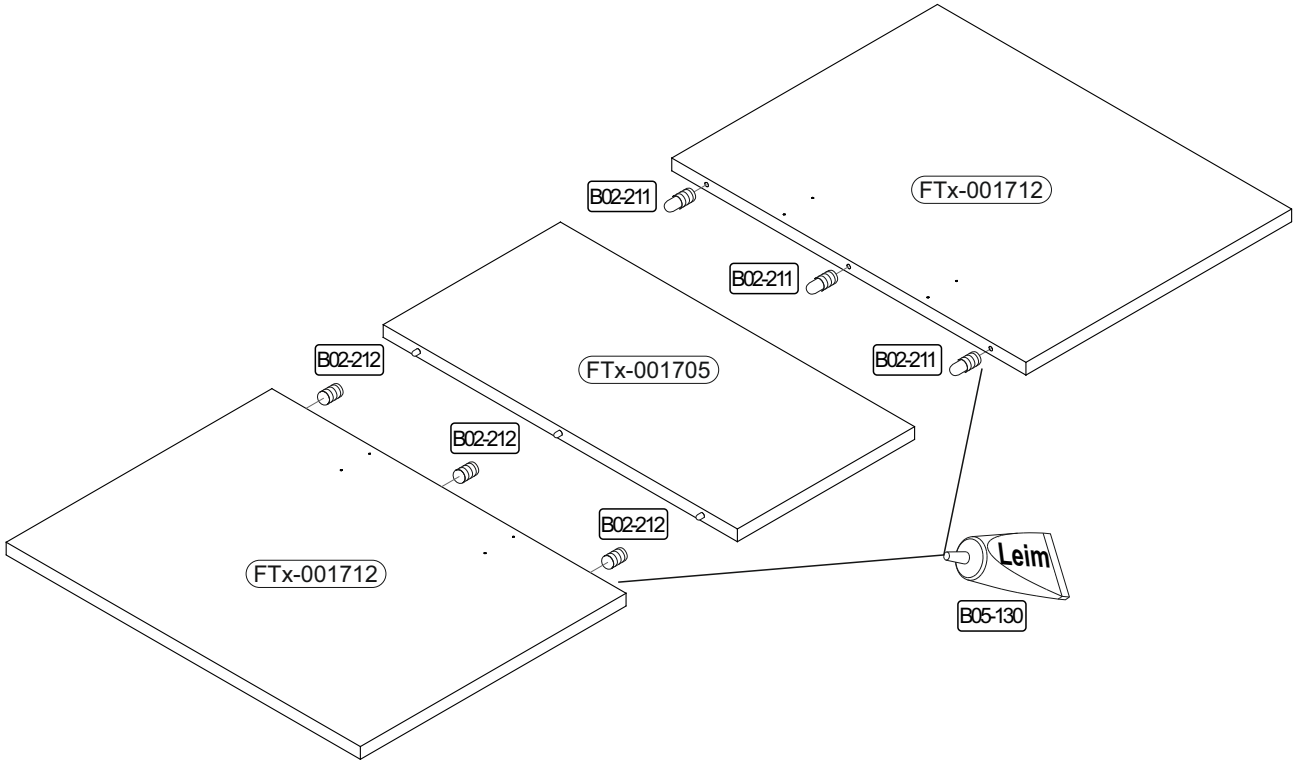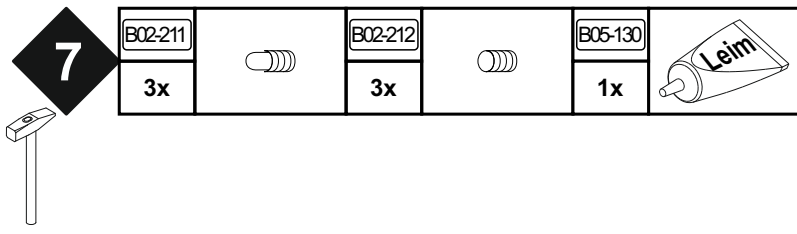

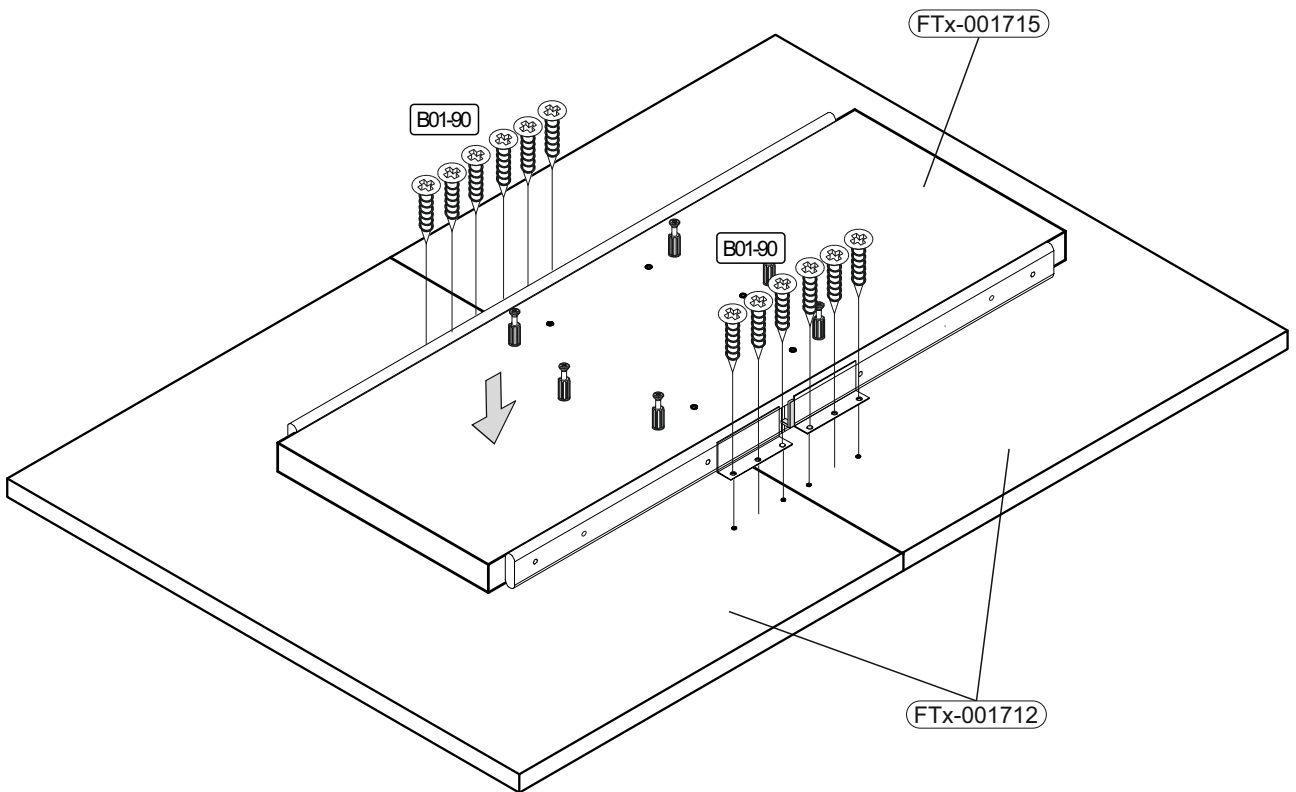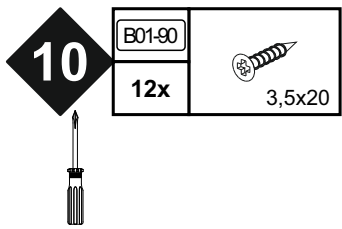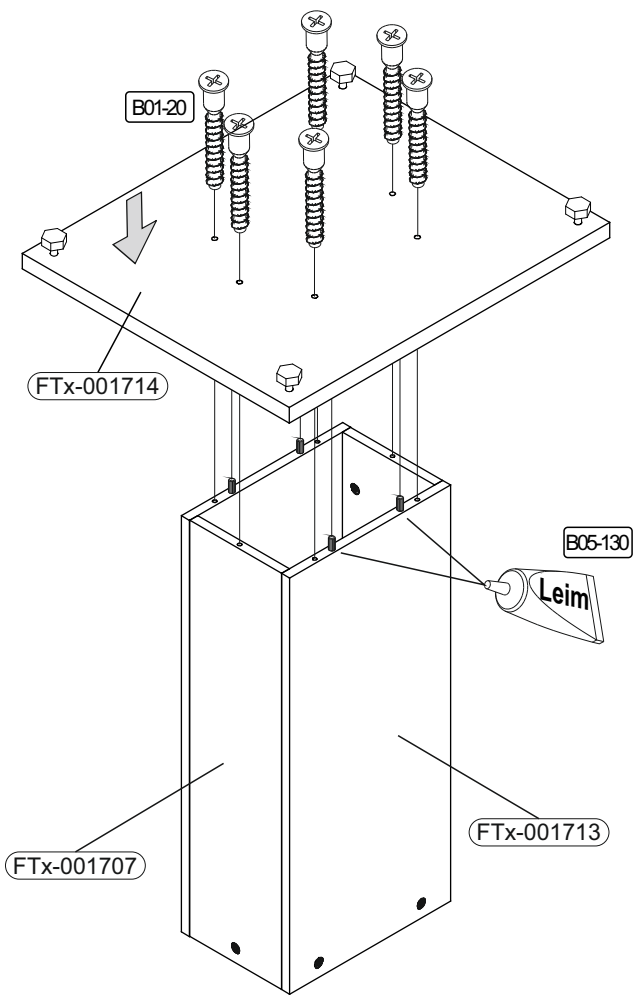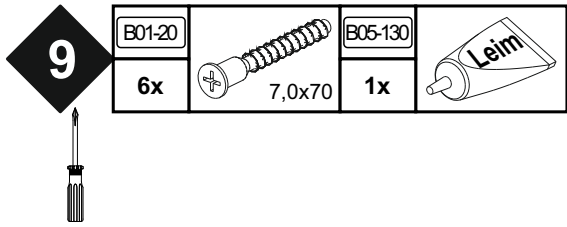

11

B05-130		B05-20	
1x		6x	

