
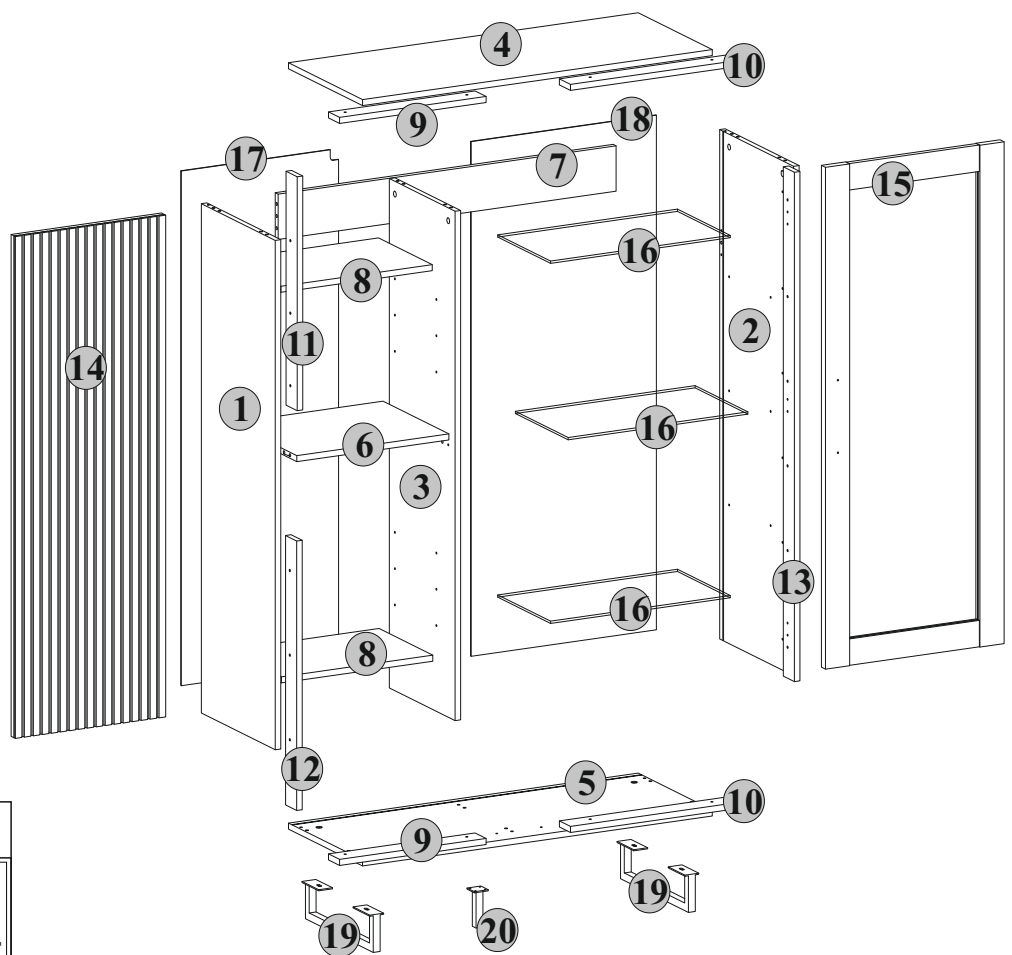
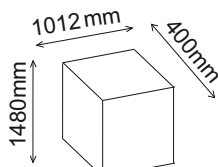




“3403”

versionsnummer: 02.08.2023


Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.

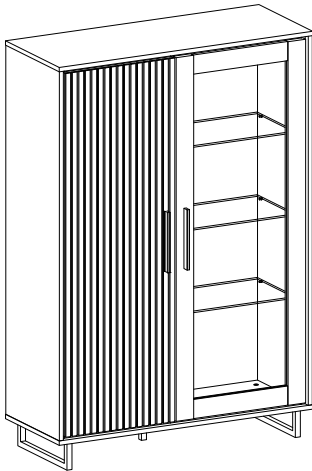


B5

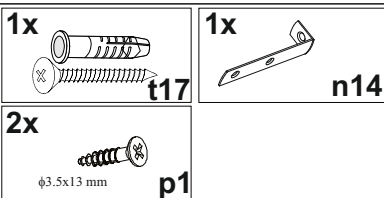


B1

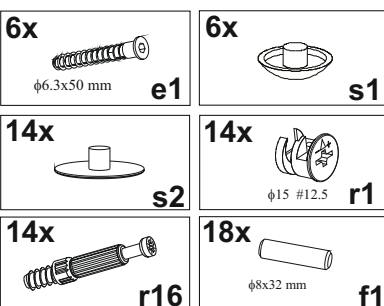


B2

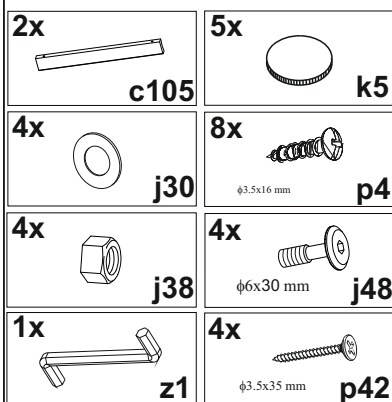










B3

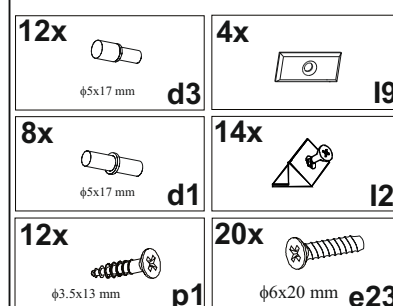










B4

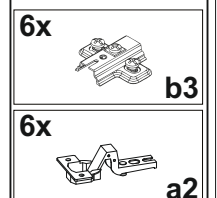

1

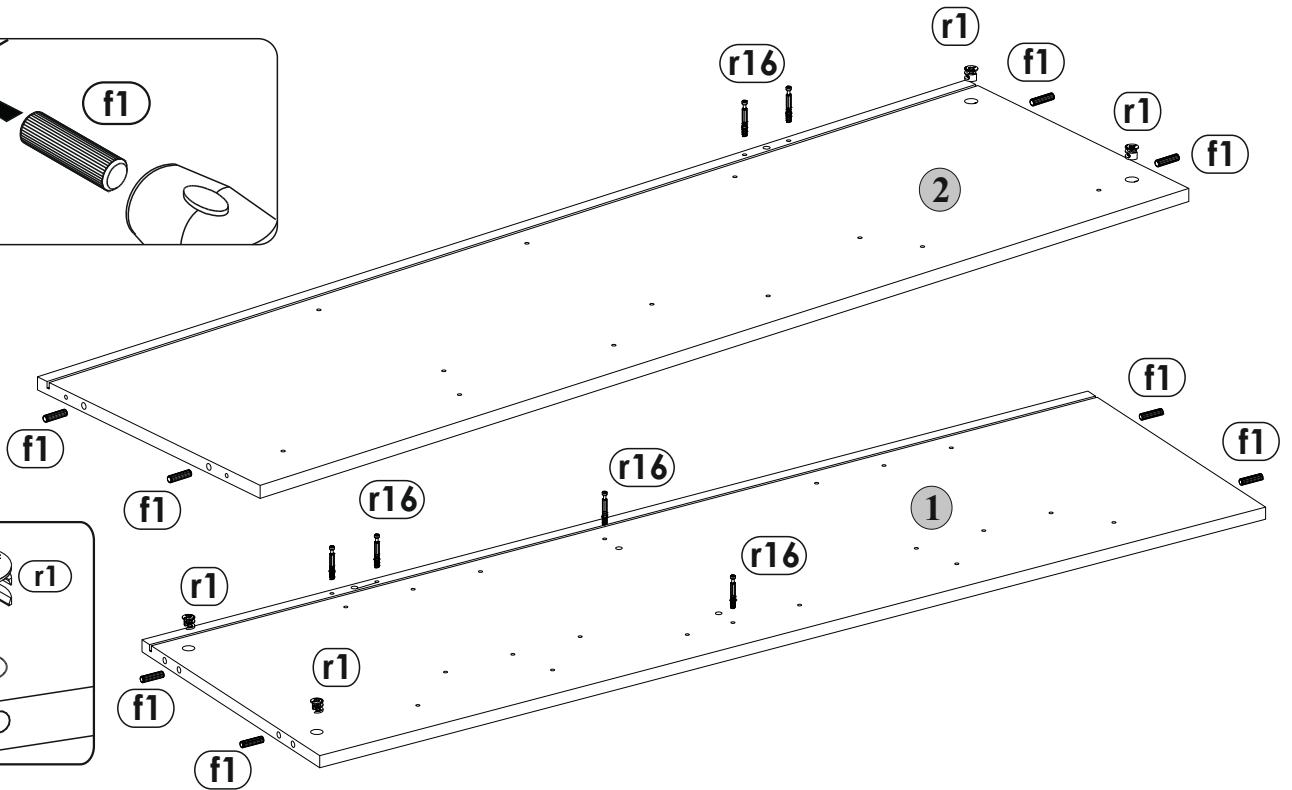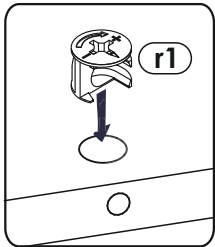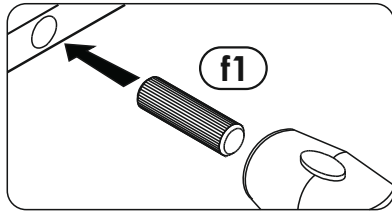

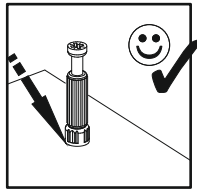
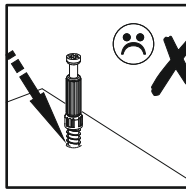
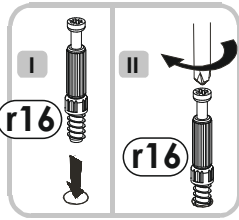


2

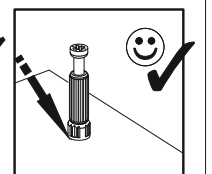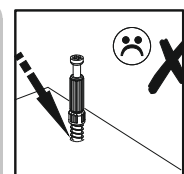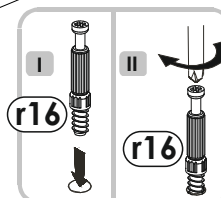
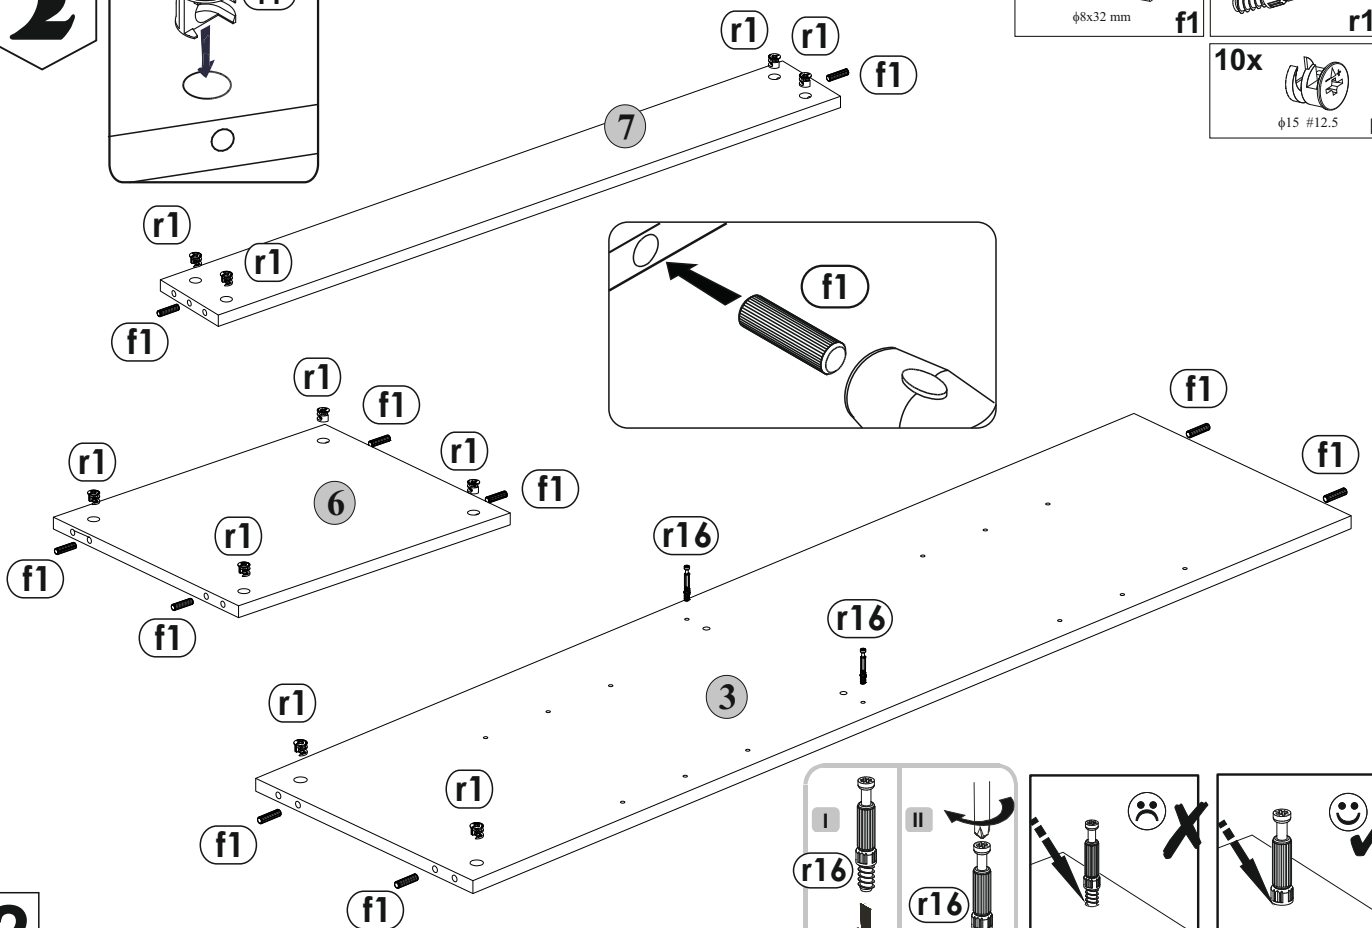
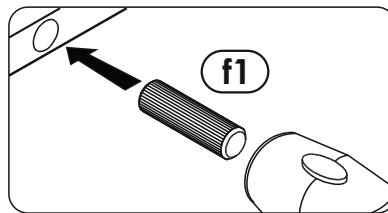



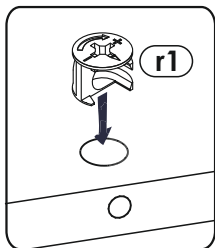


2

3

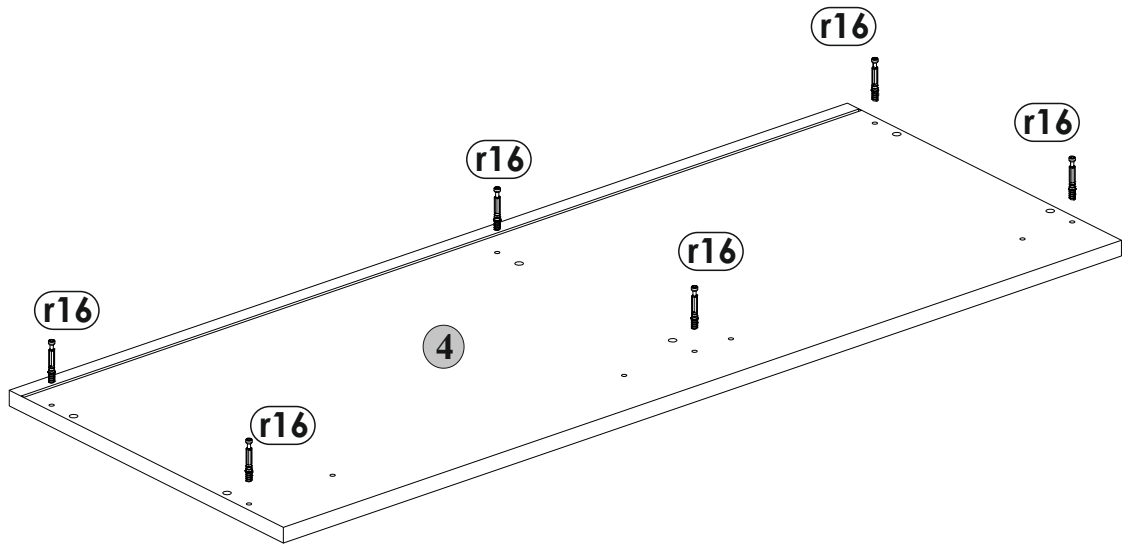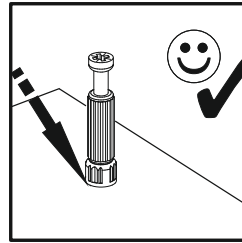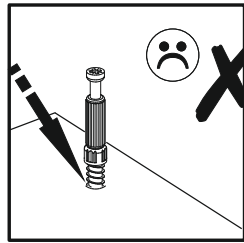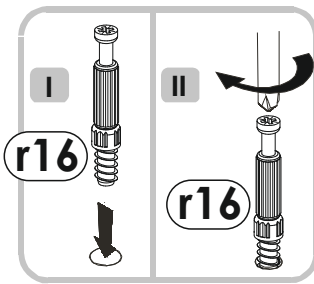


4

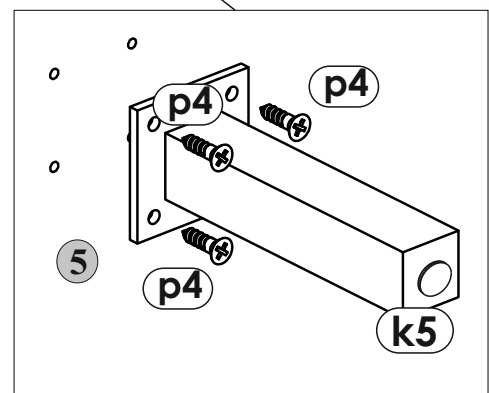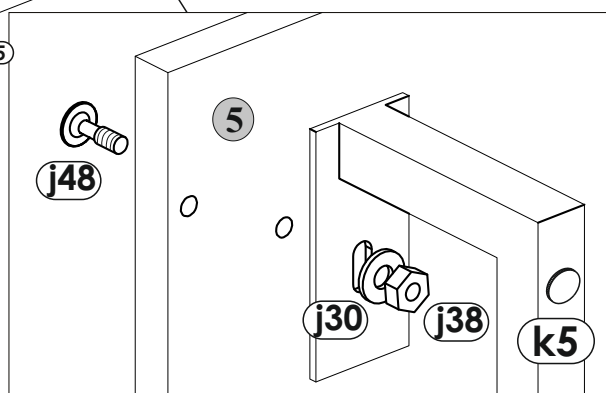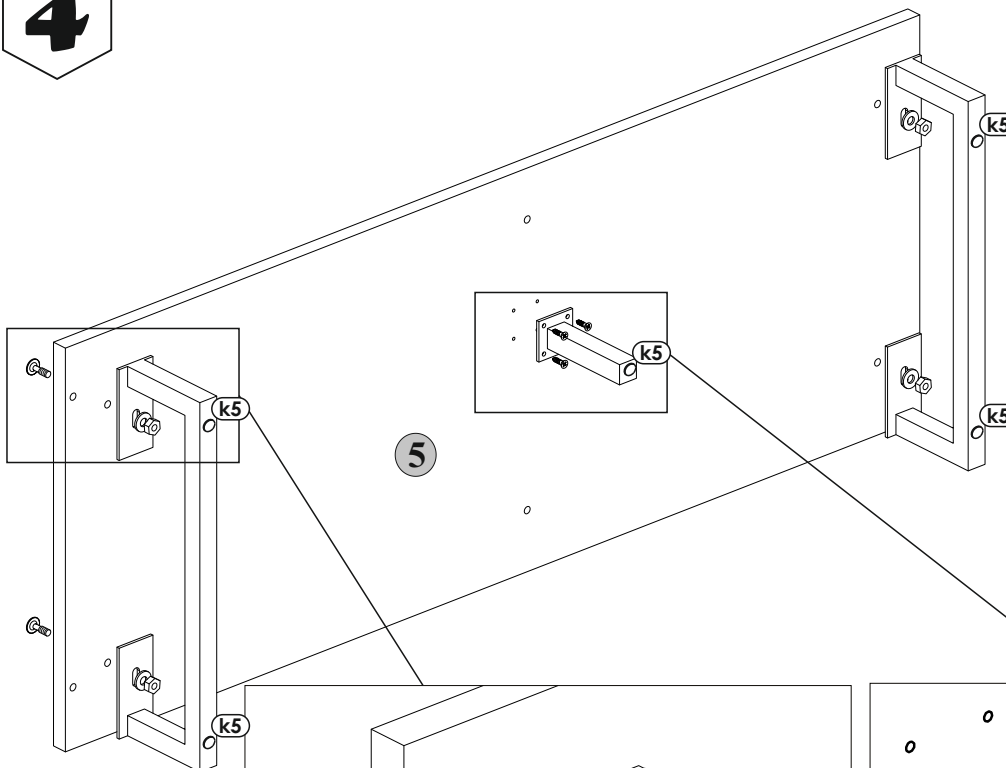


3

5

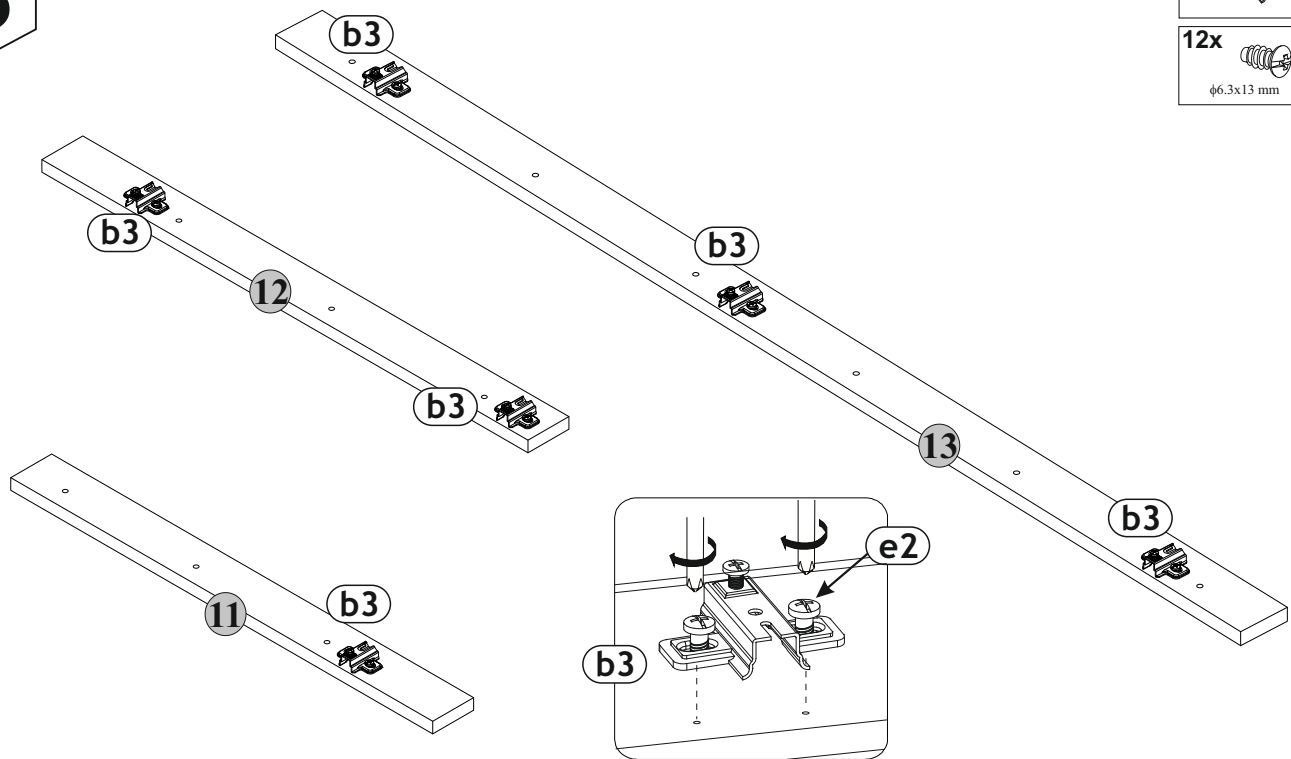


- 6x  b3
- 12x  e2
φ6.3x13 mm

6

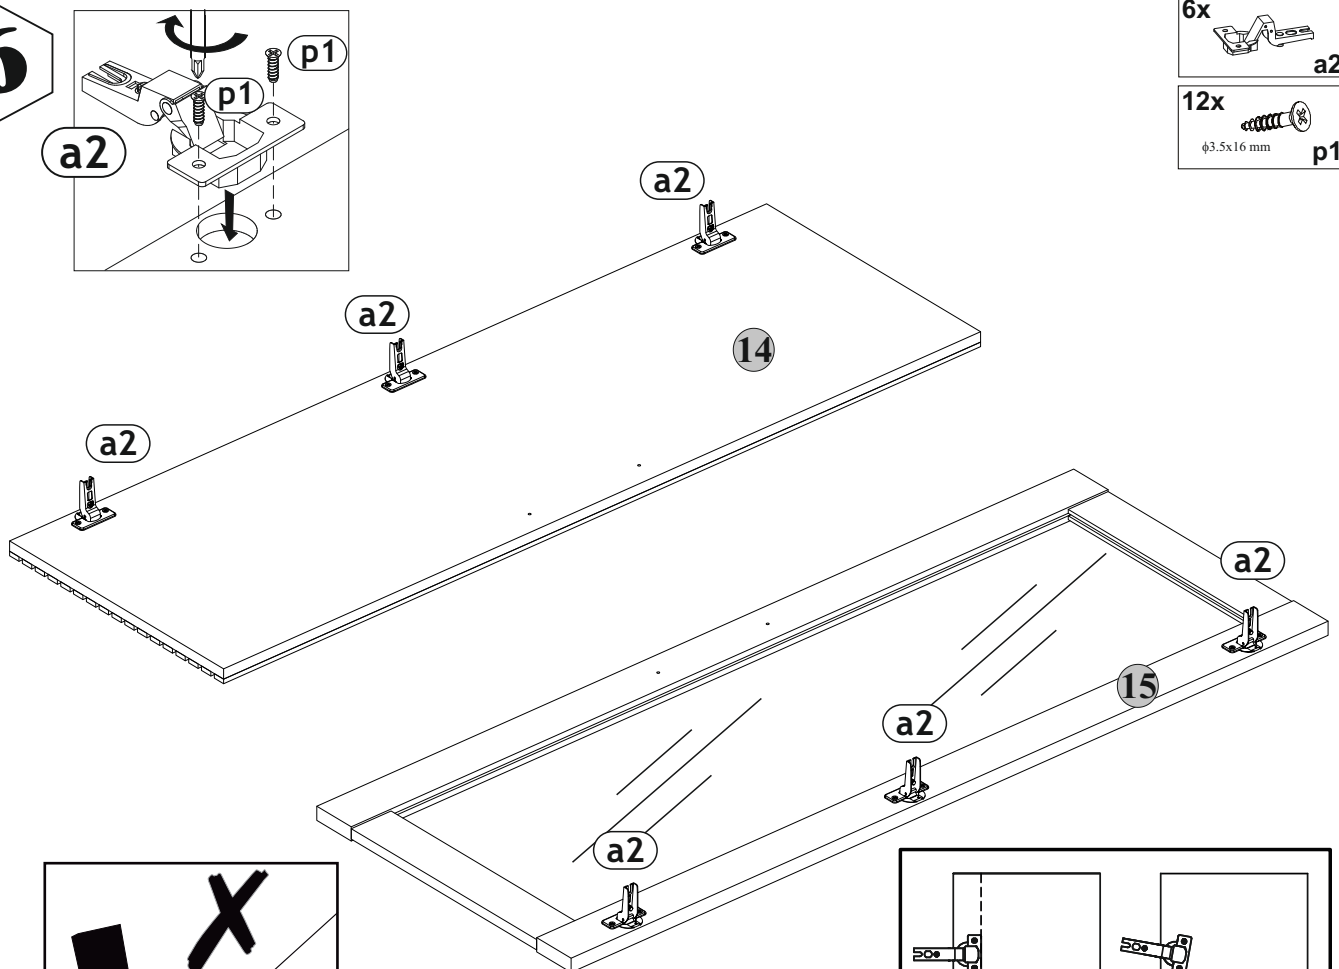


- 6x  a2
- 12x  p1
φ3.5x16 mm

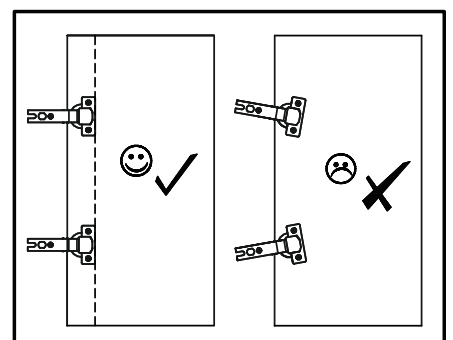


4


7

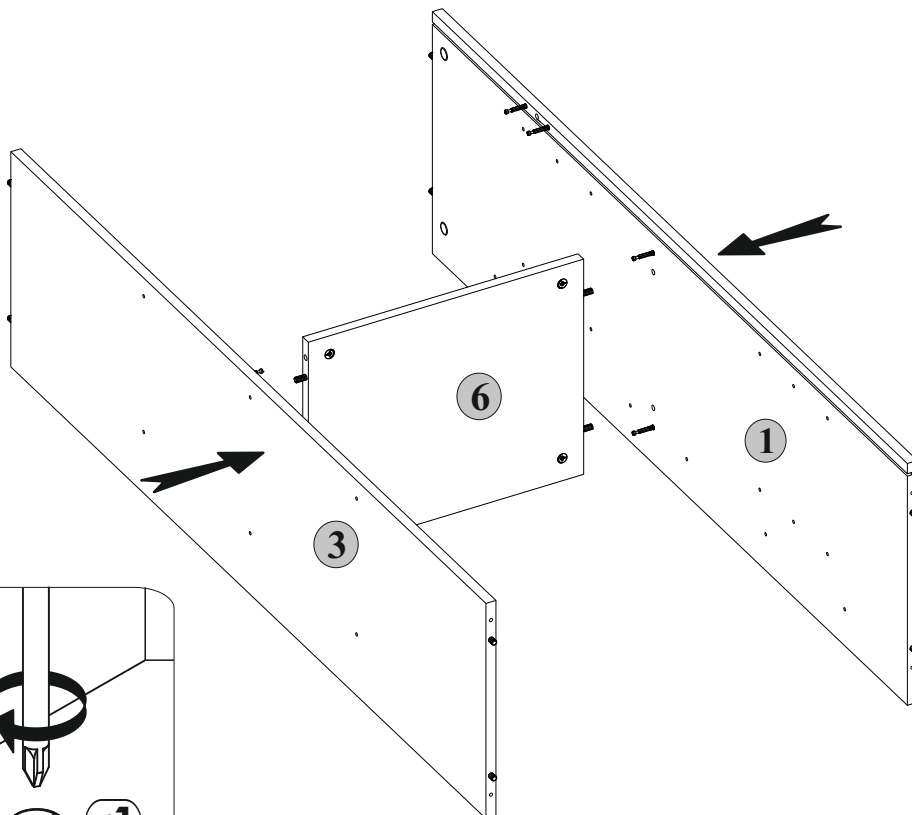


8

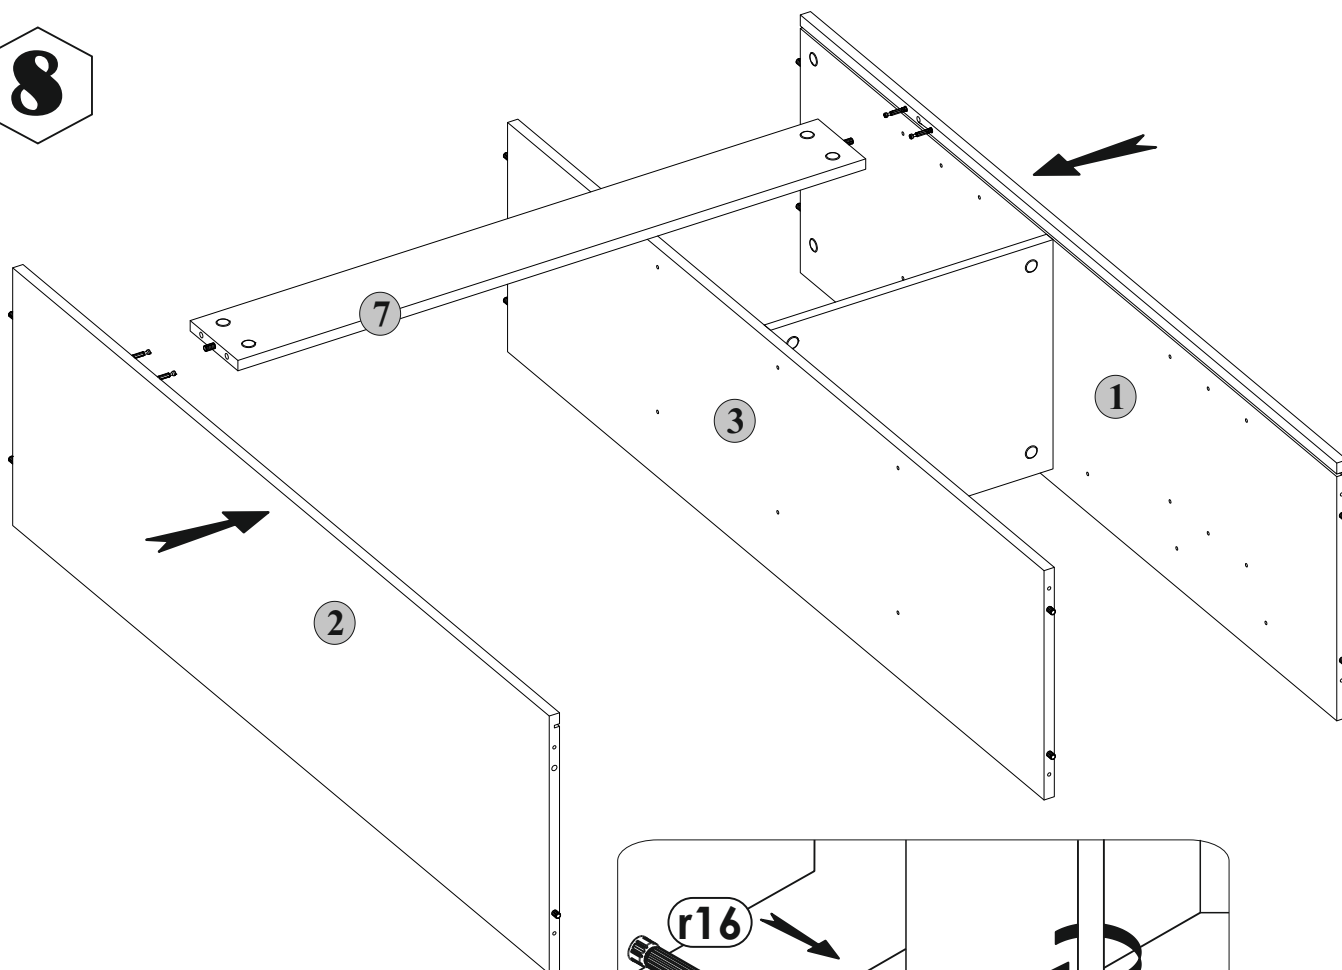

9

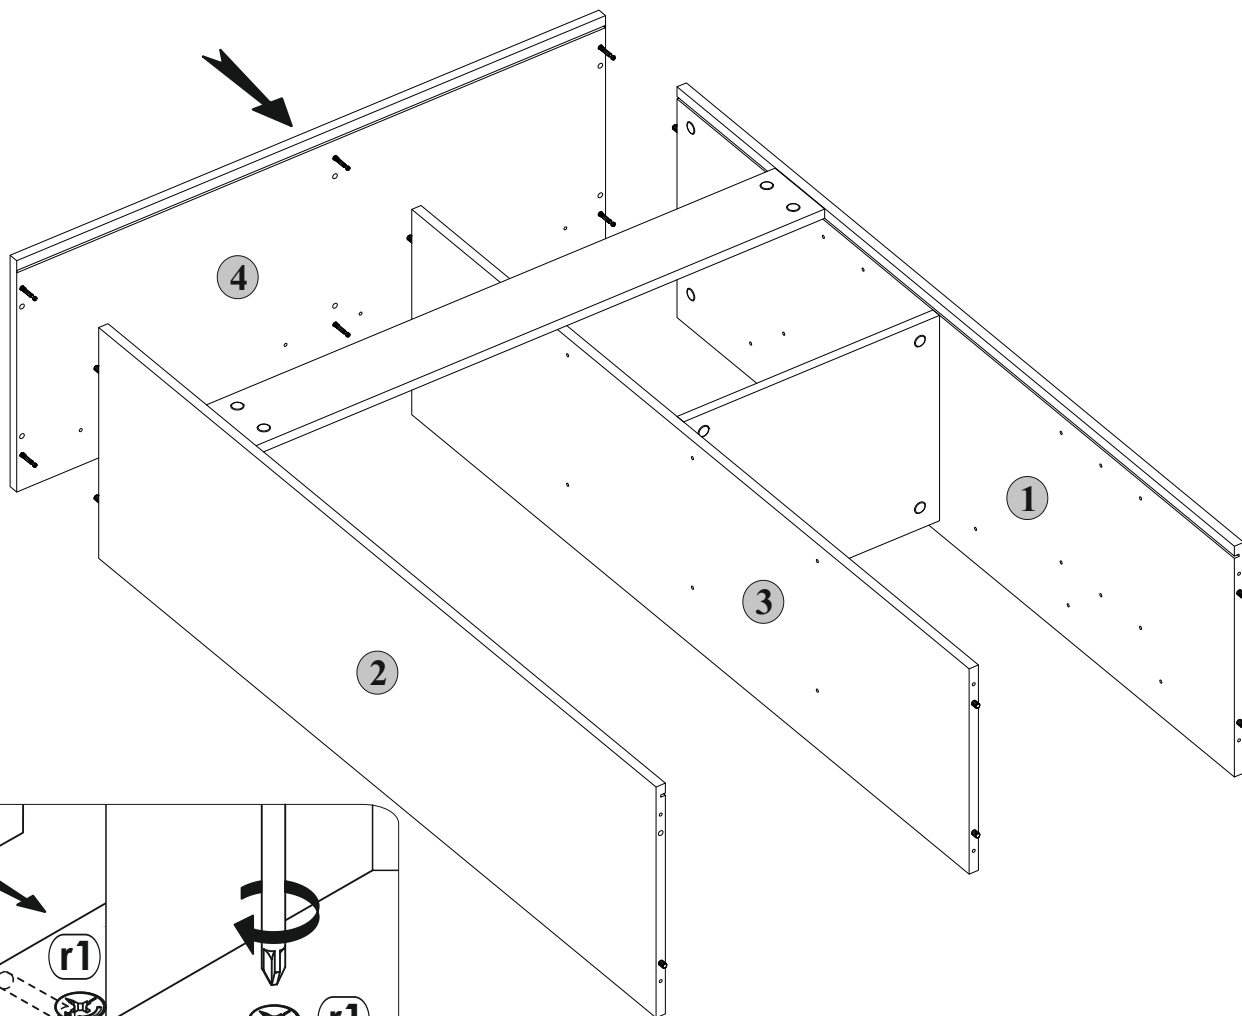

10

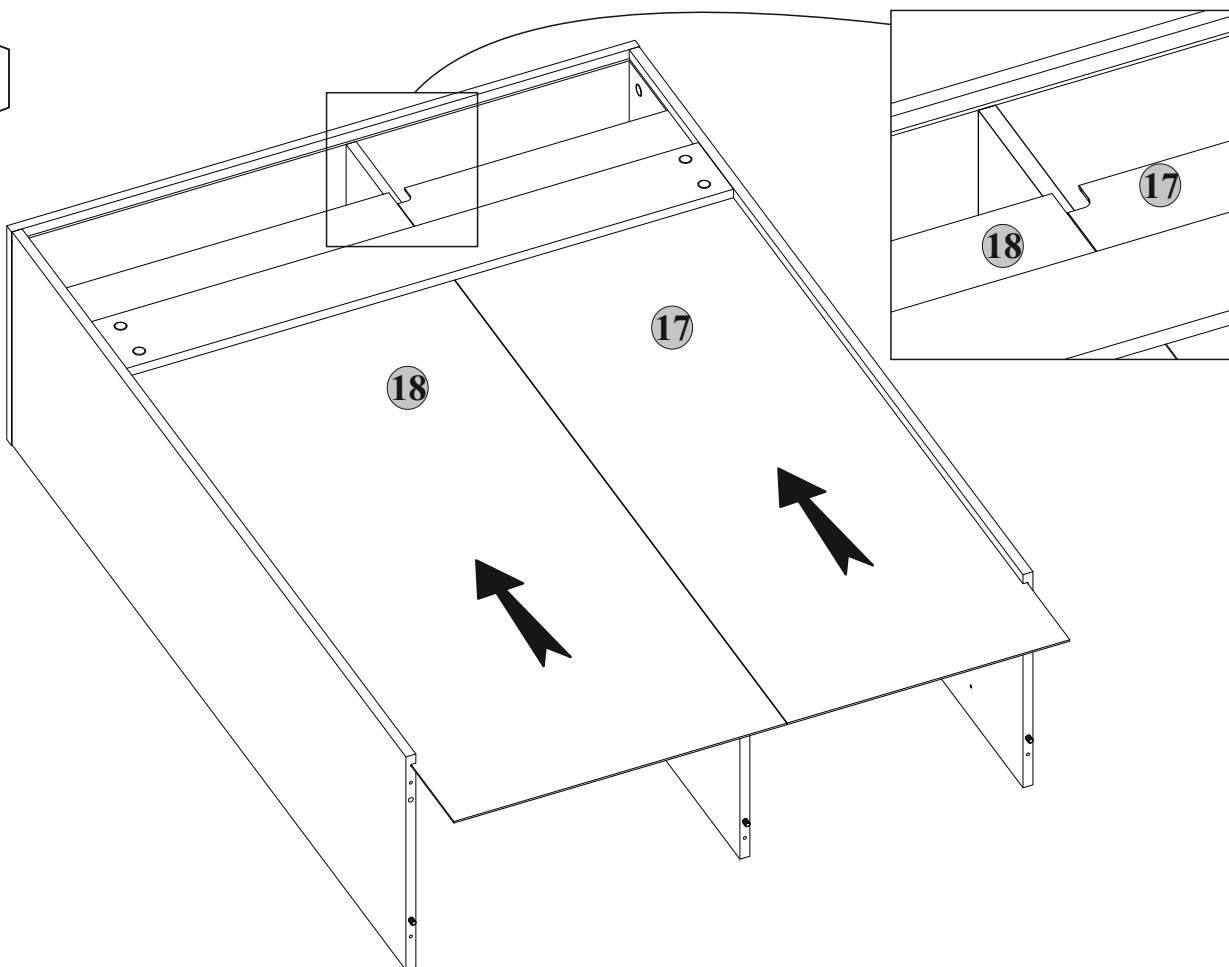




6

11

6x  e1


6x  s1

1x  z1


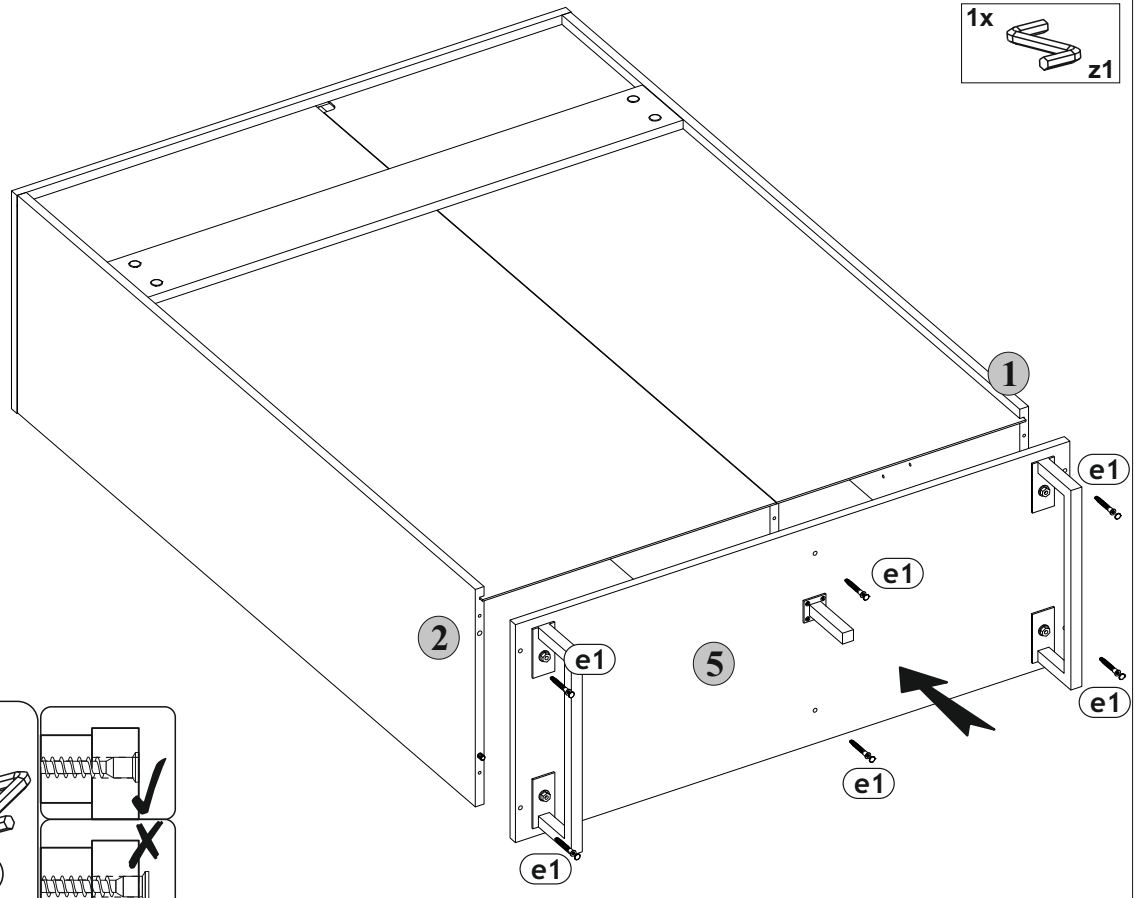
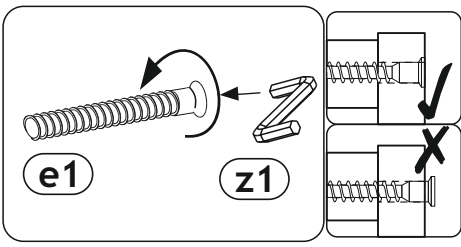
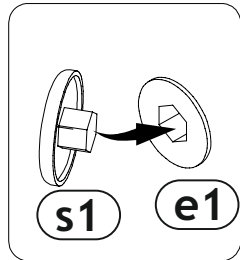


12

14x  l2

4x  i9




4x  p4
φ3.5x16 mm

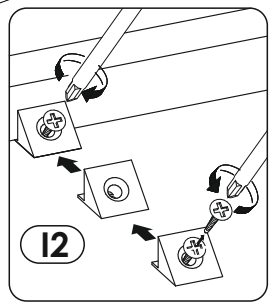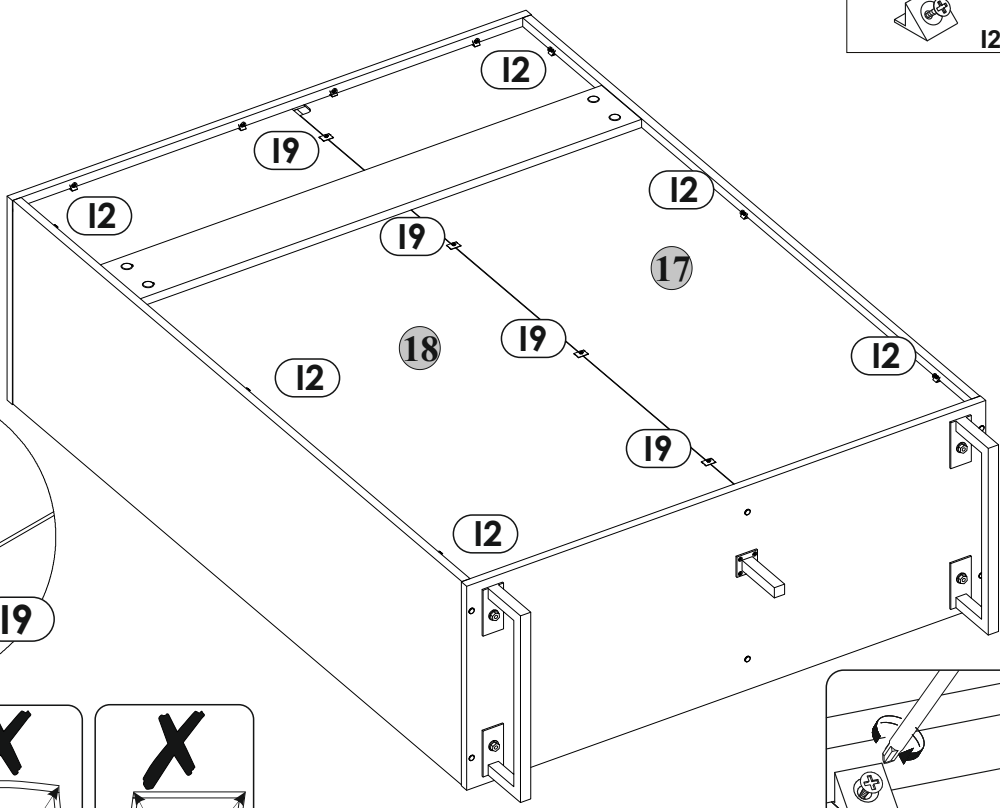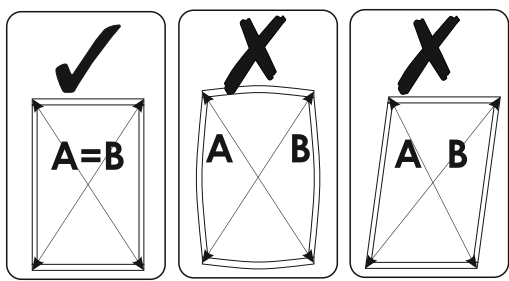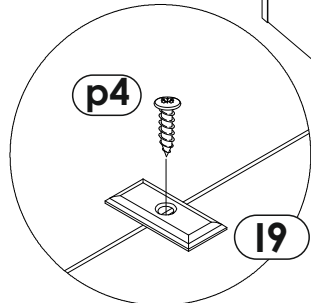

7

13

20x
e23
φ6x20 mm

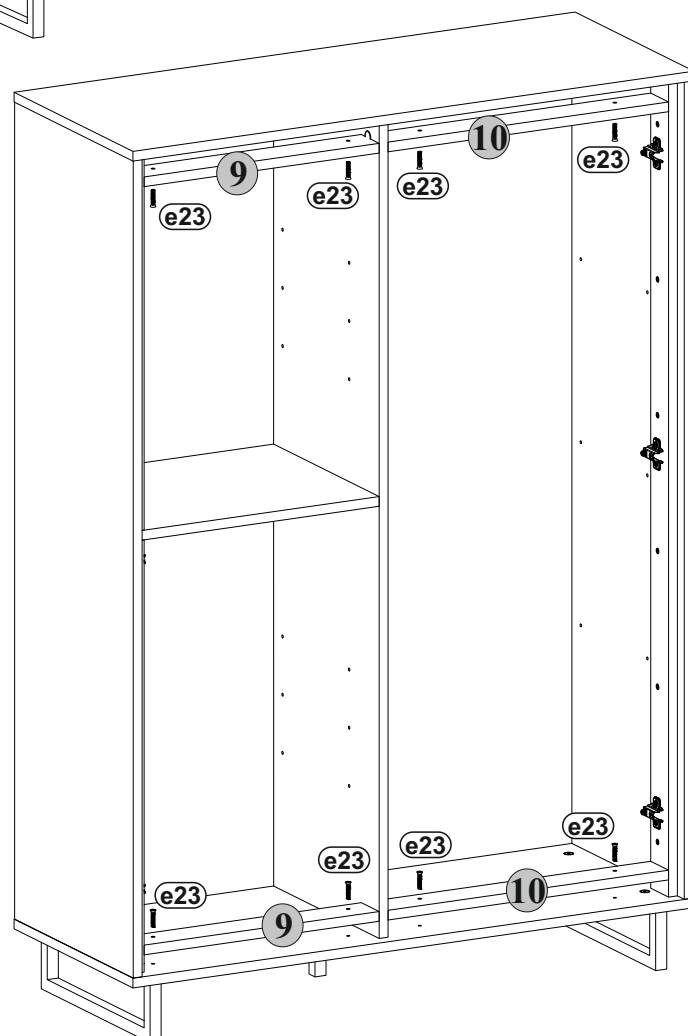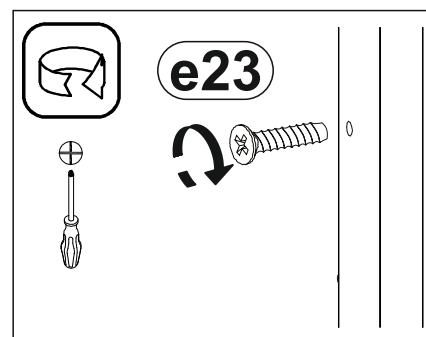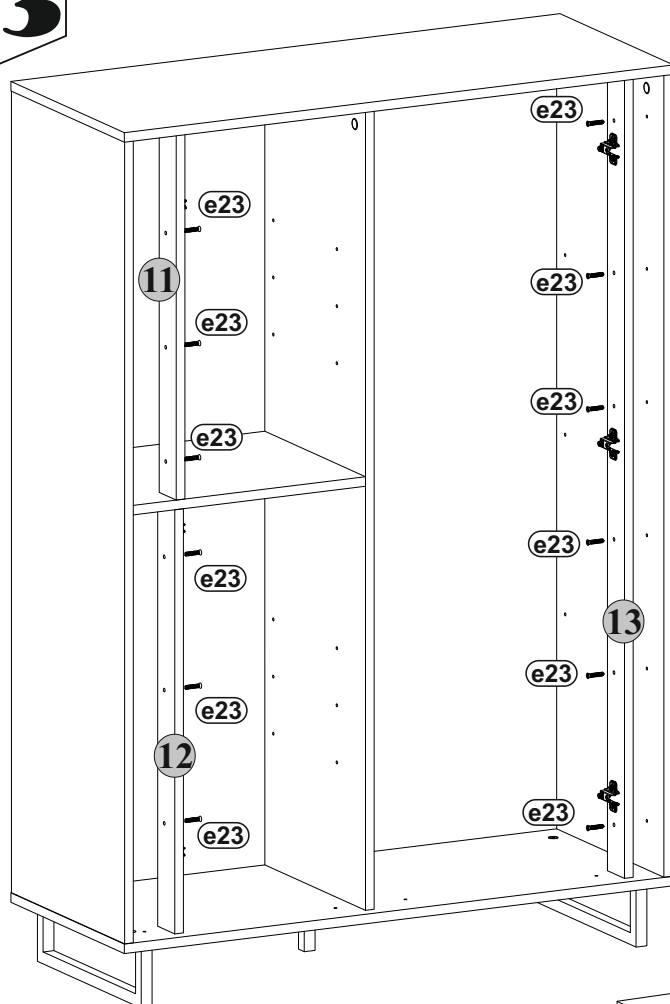

I4




4x
p42

2x
c105

1x
t17

1x
n14

2x
p1
φ3.5x16 mm

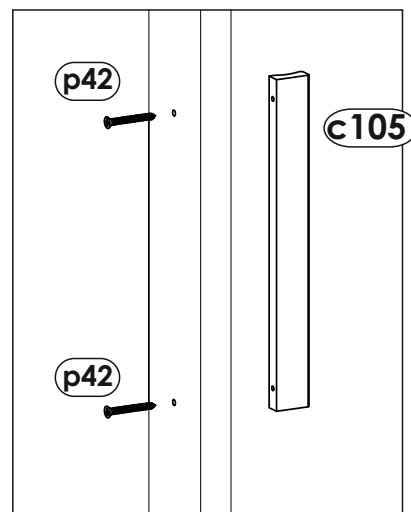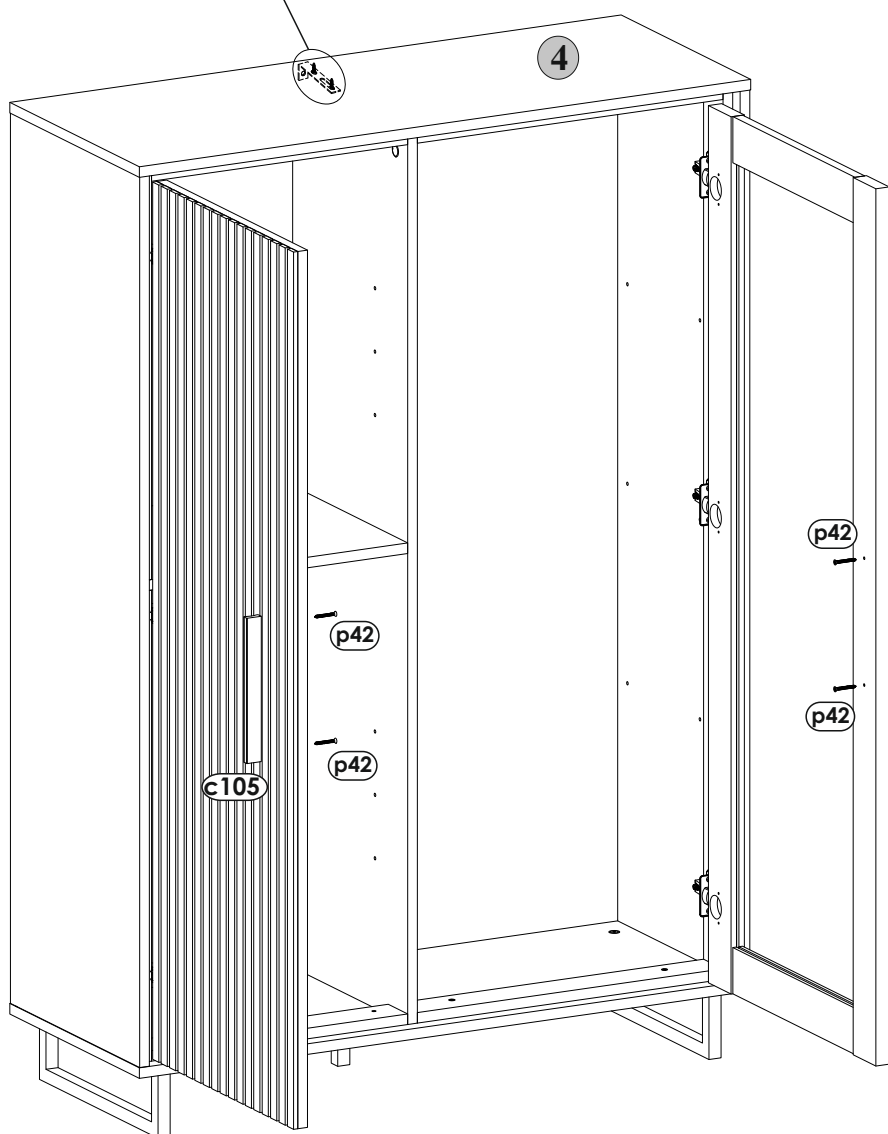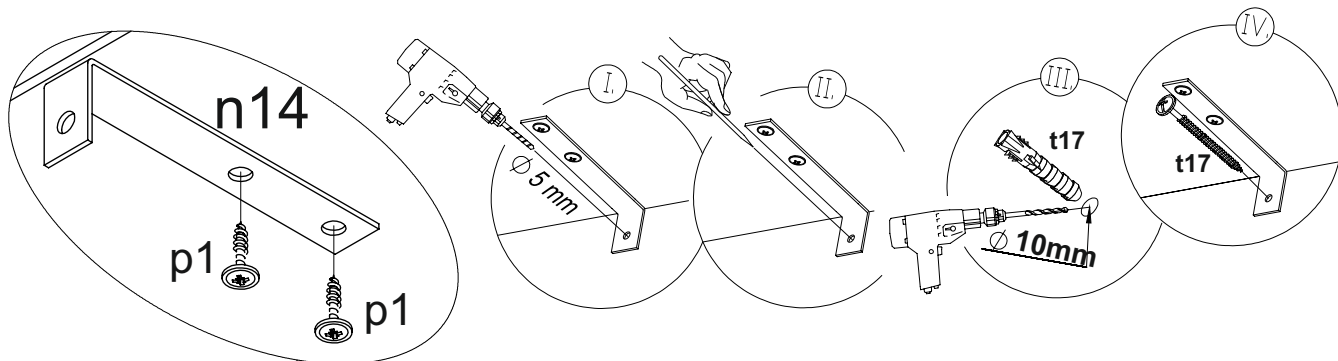

c105






p42

p42

p42

p42

c105

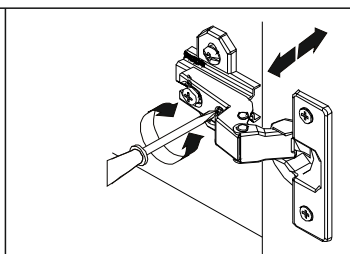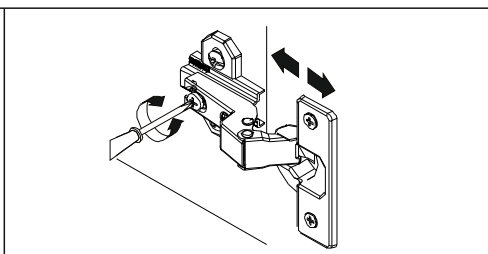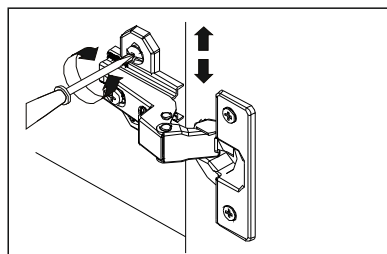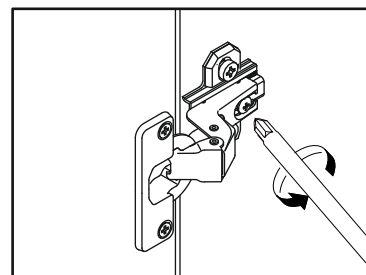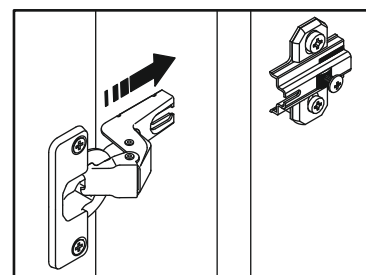




9

15

12x 
 $\phi 5 \times 17$ mm **d3**

8x 
 $\phi 5 \times 17$ mm **d1**

14x 
s2

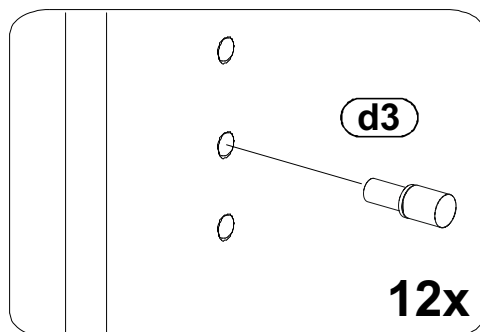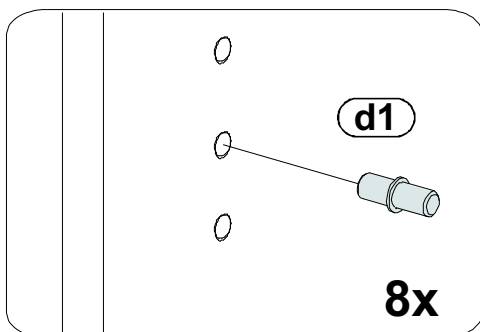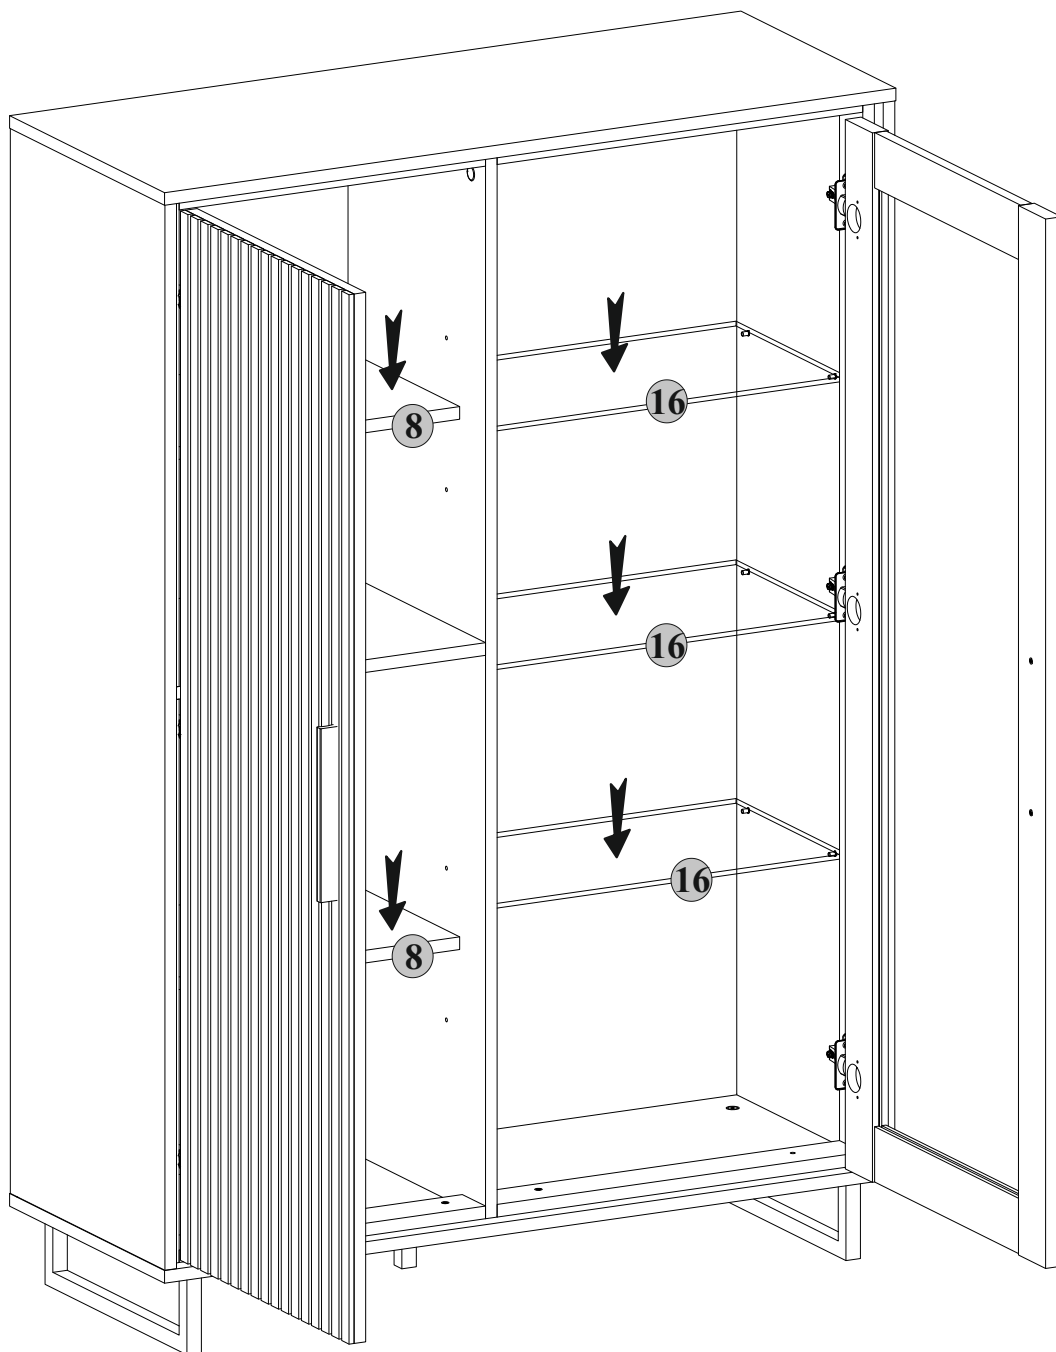

10