
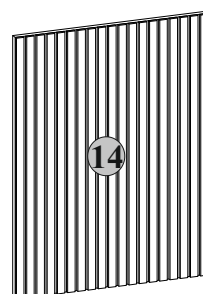
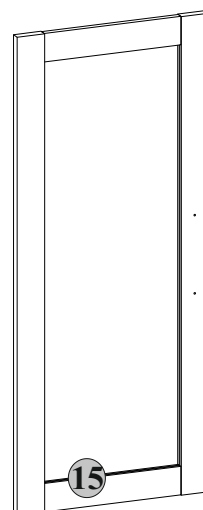
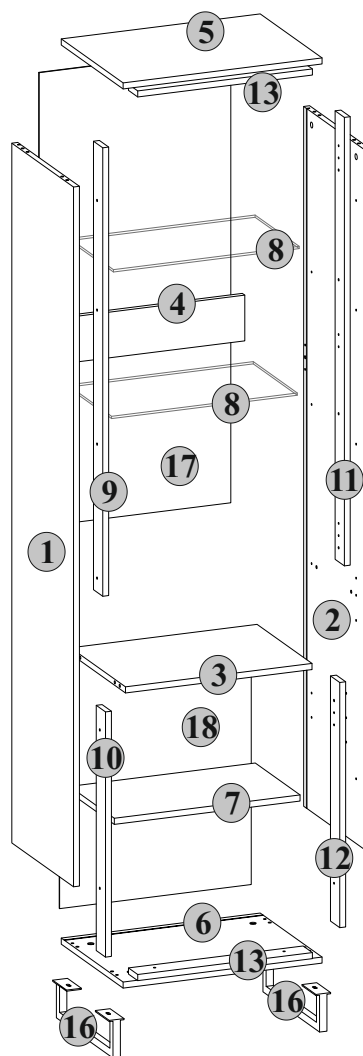
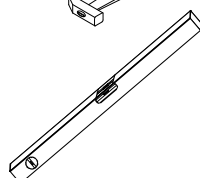

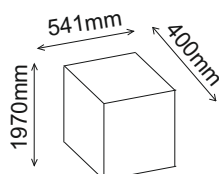
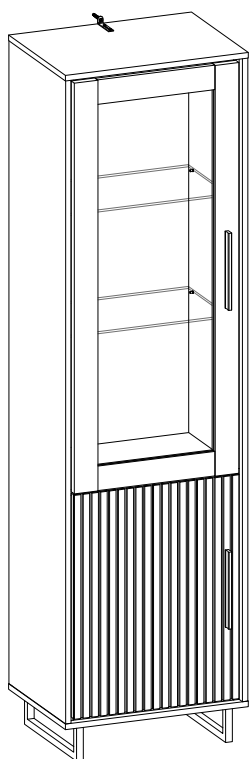





“3501”

versionsnummer: 16.12.2023





Naturholz kann sich werkstoffbedingt verziehen. Durch das Montieren ziehen sich Teile wieder plan.











B5





B1




B2












B3









B4



I

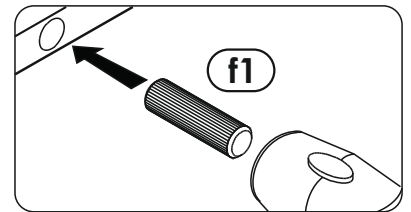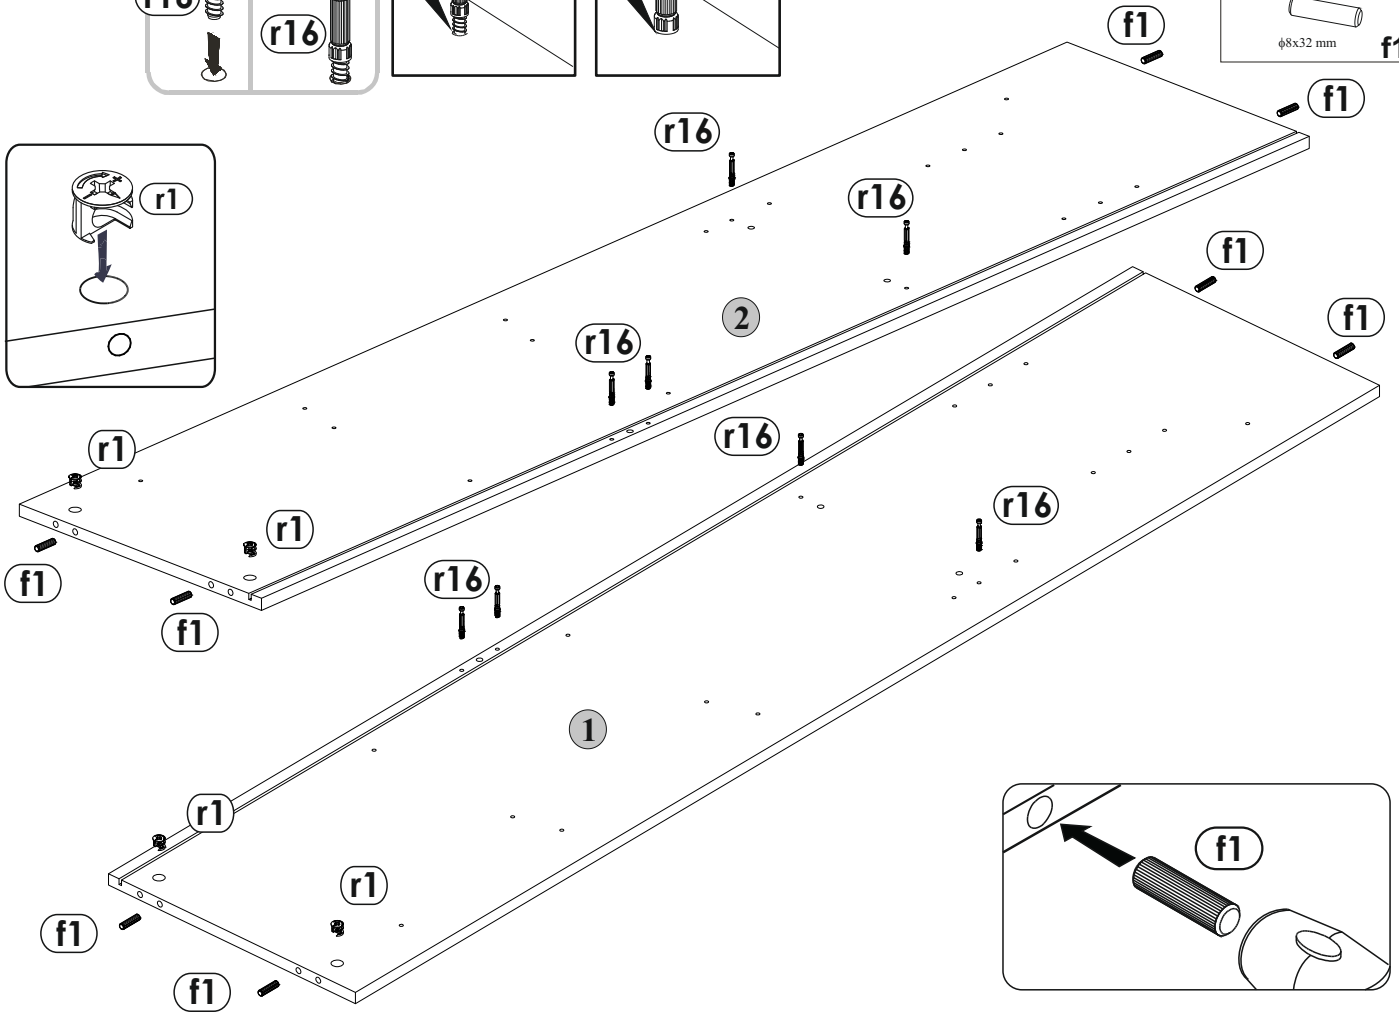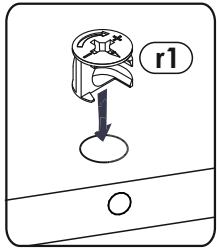

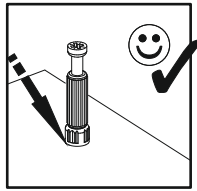
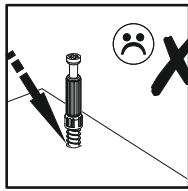
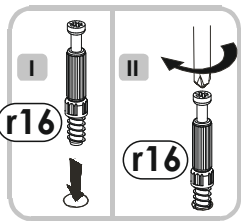


2

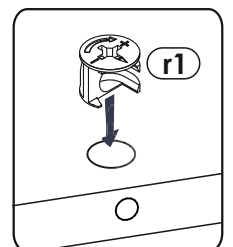
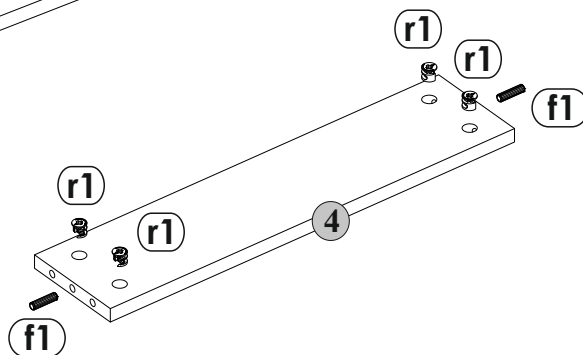
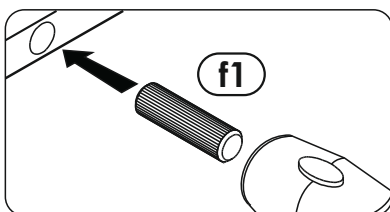
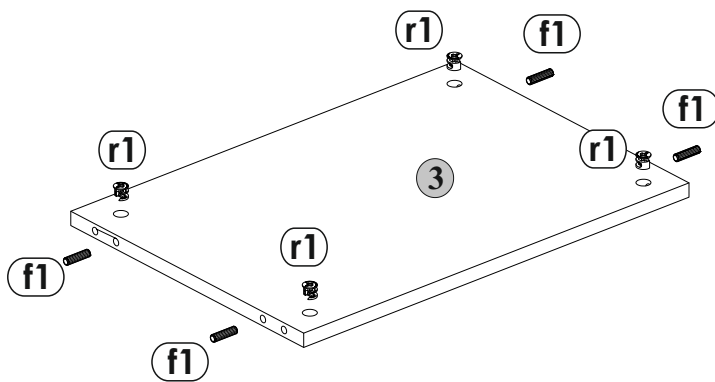




2

3


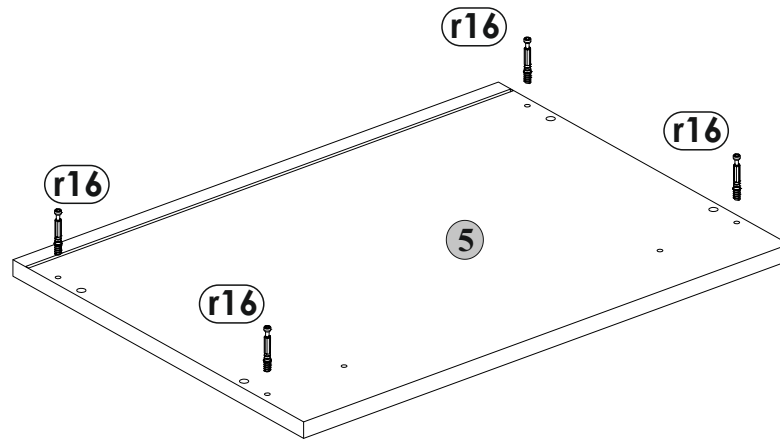

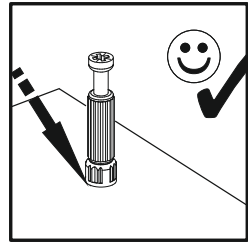
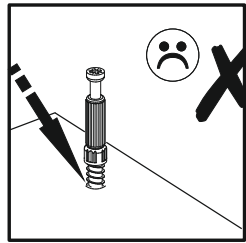
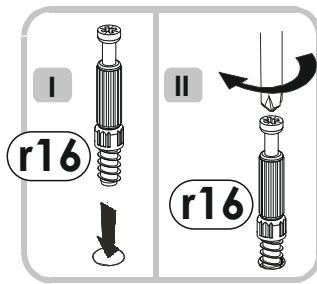


4

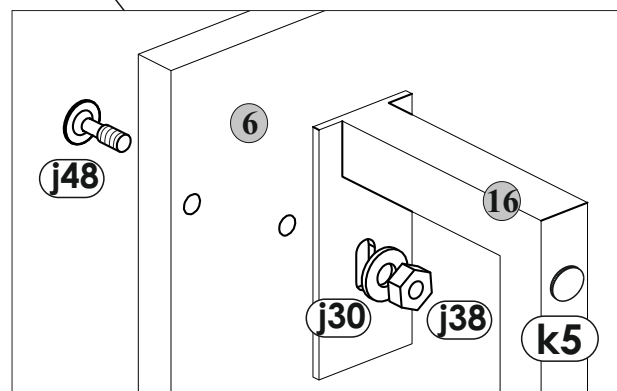
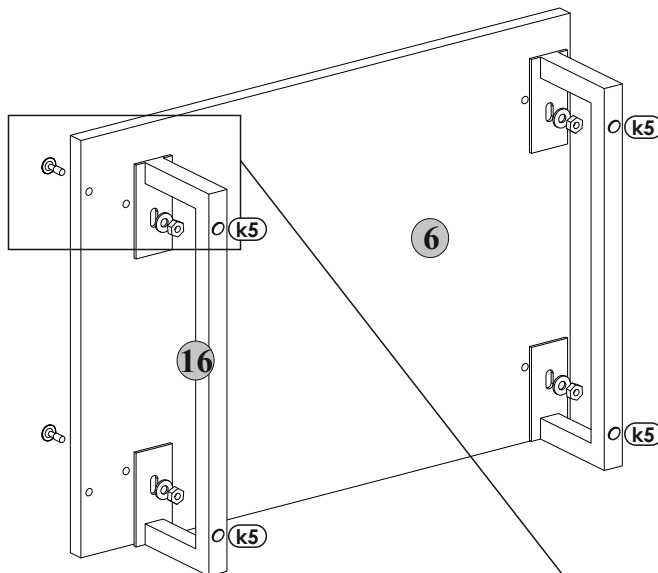


3

5

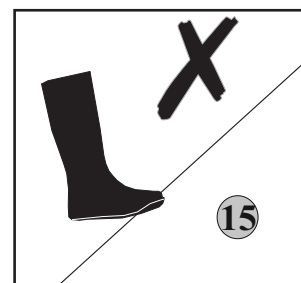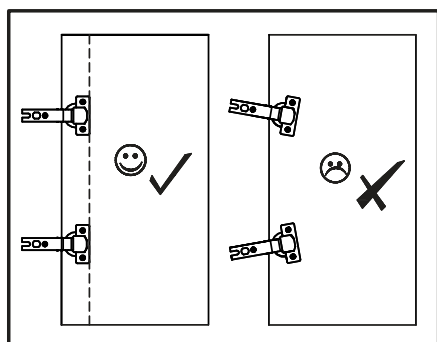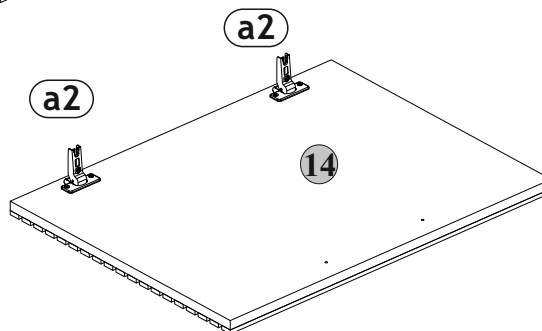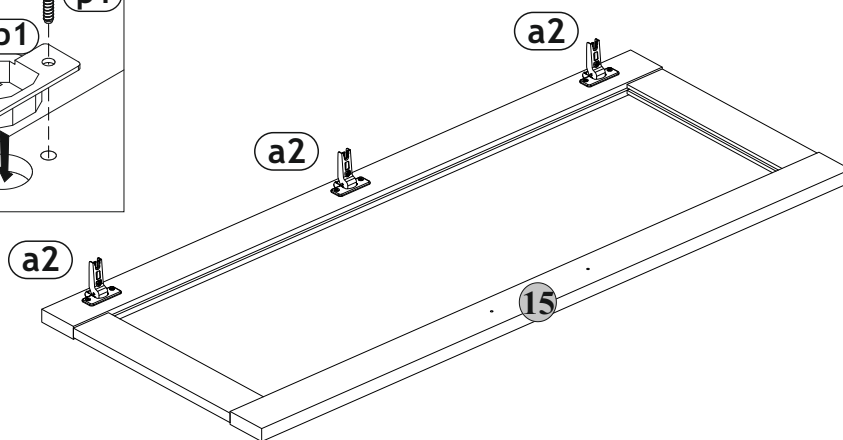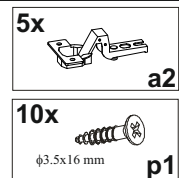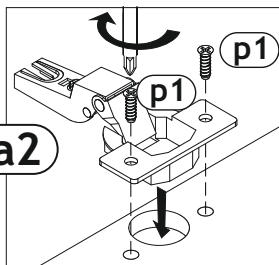


6

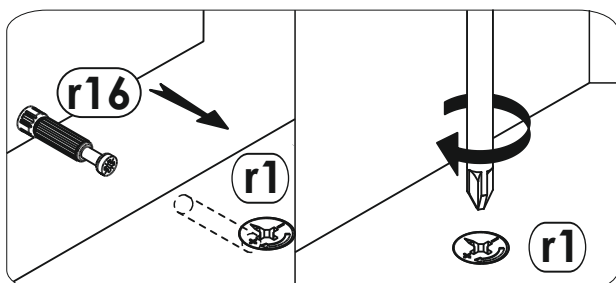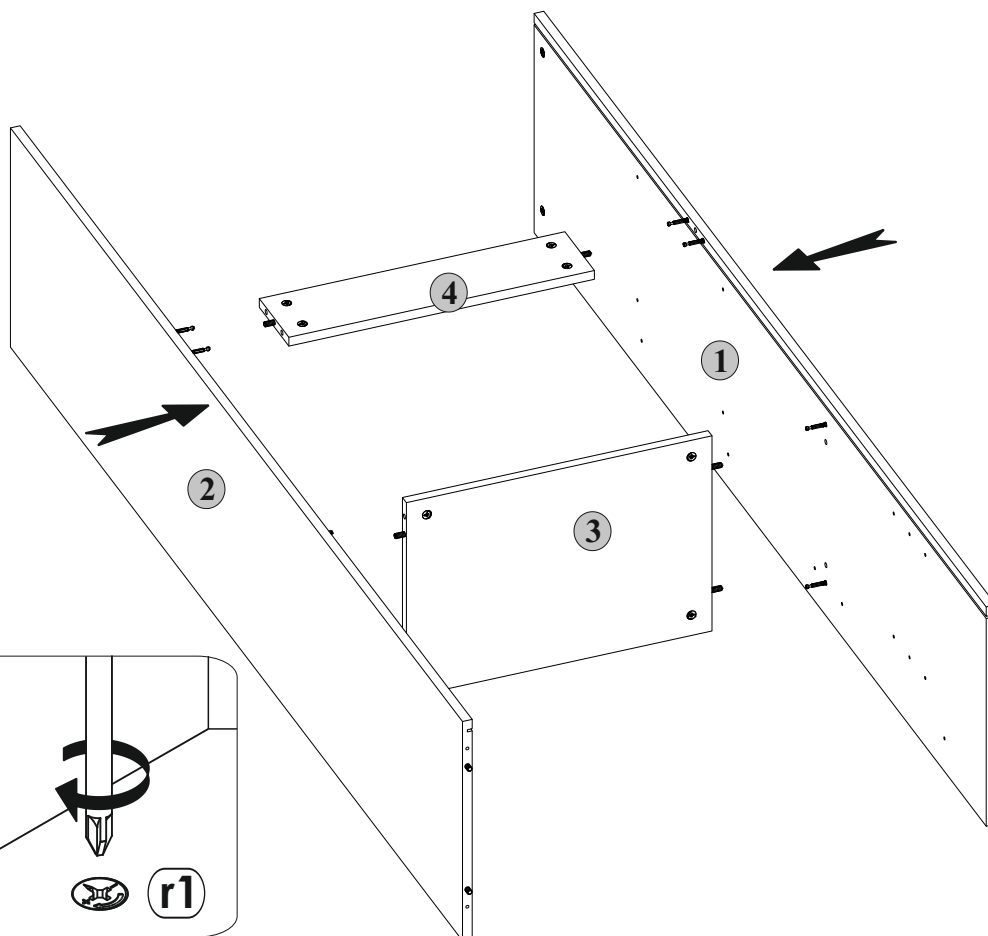


4

7



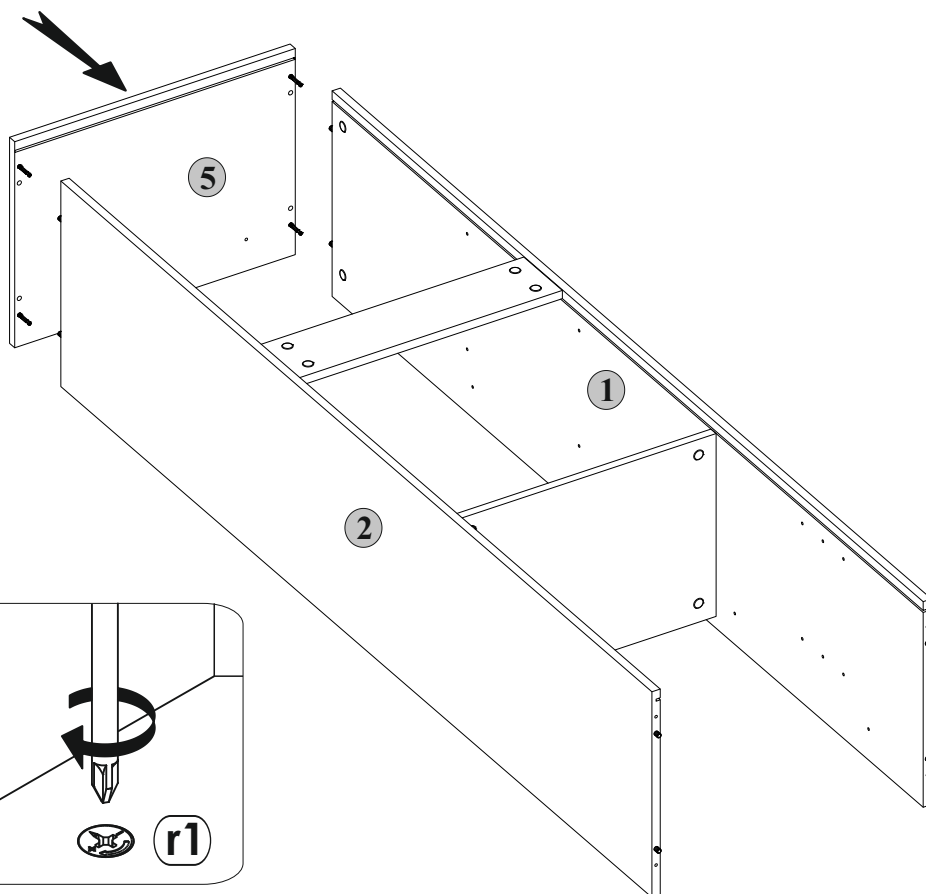


8

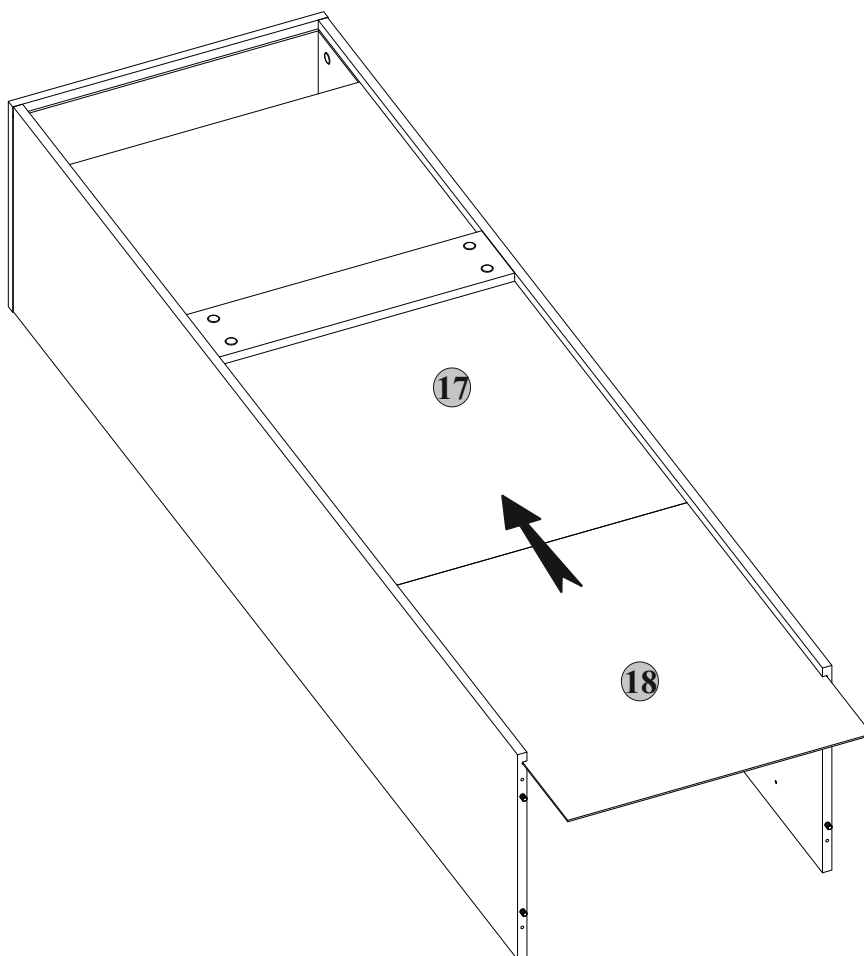






9

- 4x  e1
- 4x  s1
- 1x  z1

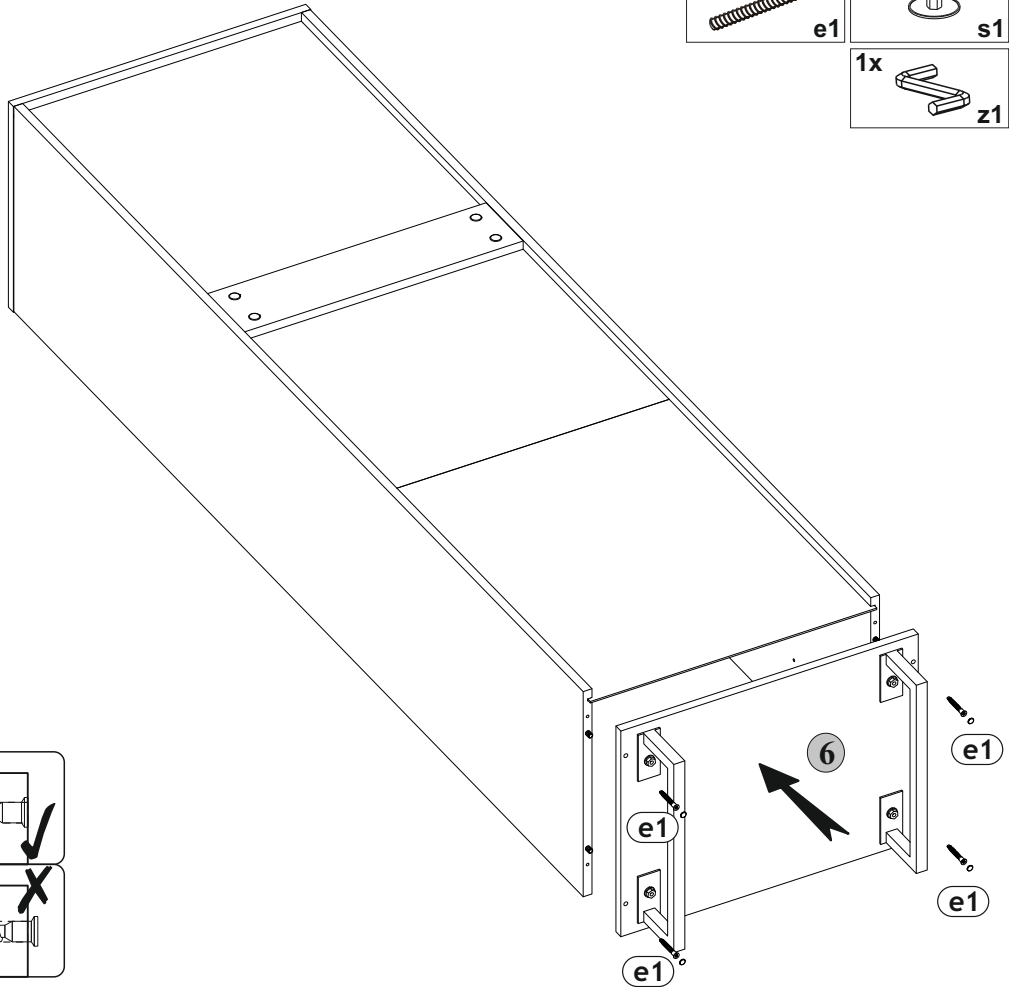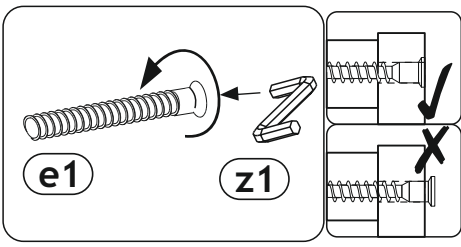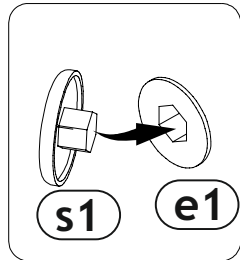


10

- 14x  l2
- 2x  l9
- 2x  p4
φ3.5x16 mm

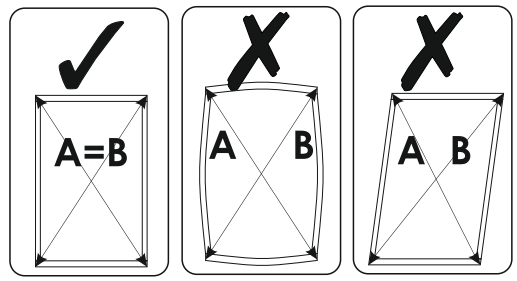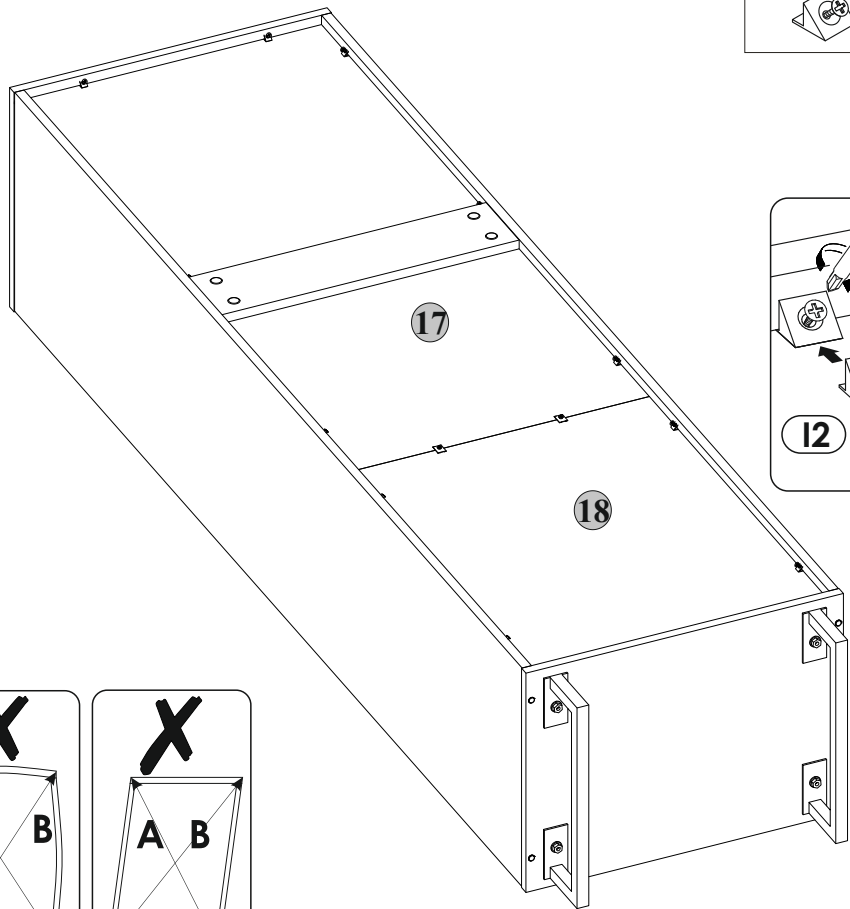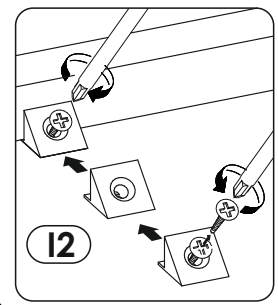
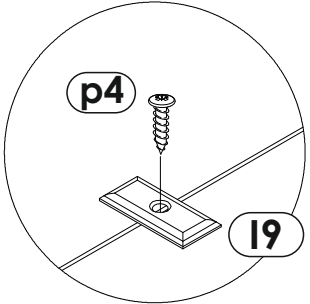


6

11

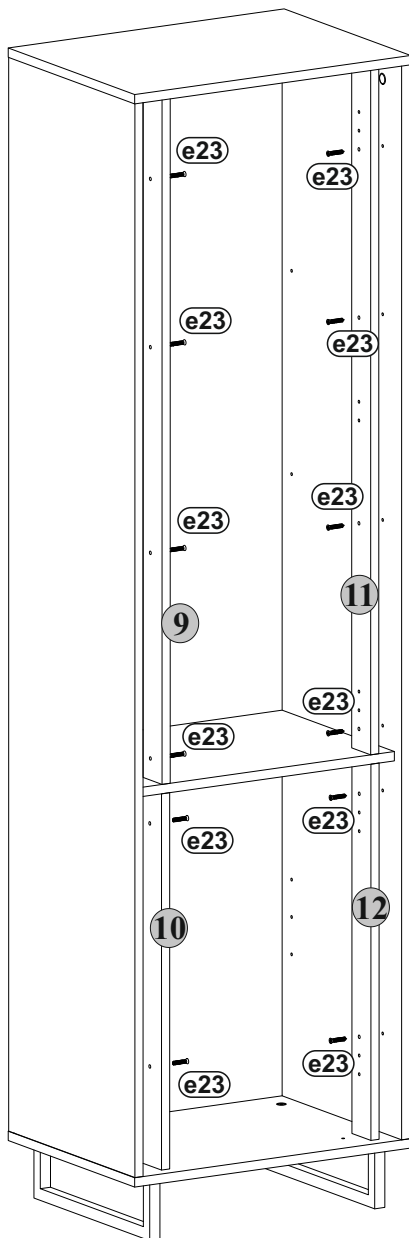


16x
φ6x20 mm **e23**

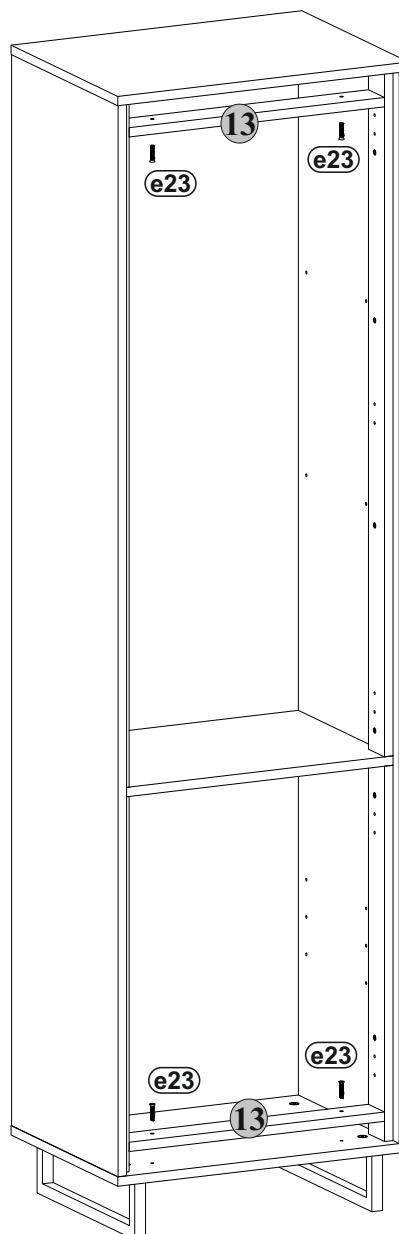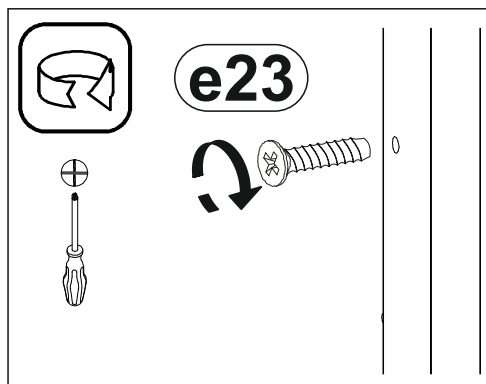






7

12

Version L

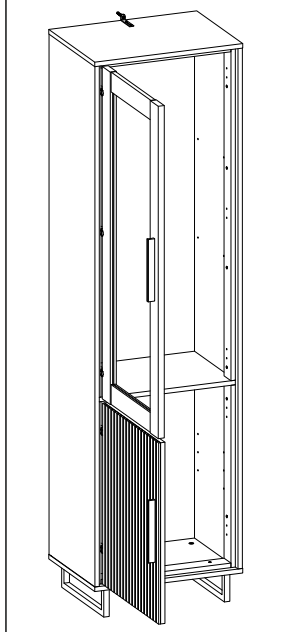

Version R

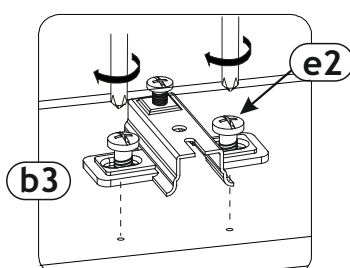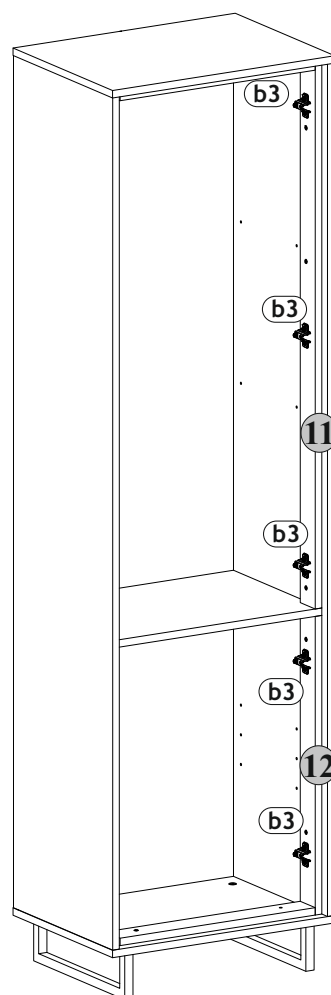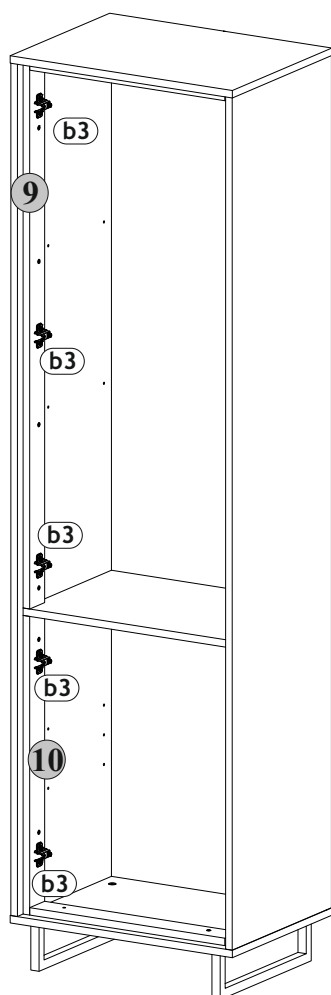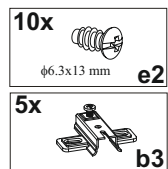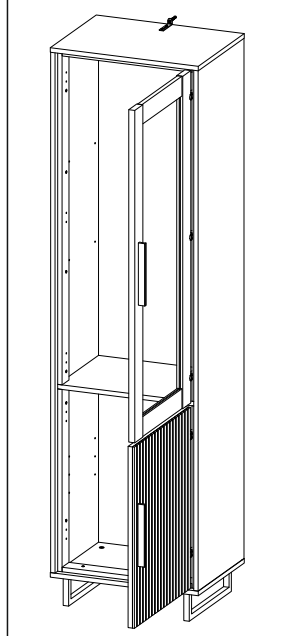

13













4x
p42

2x
c105

1x
t17

1x
n14

2x
p1
φ3.5x16 mm

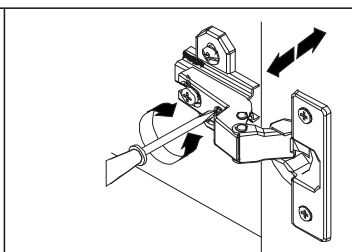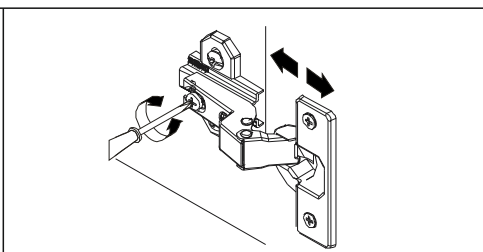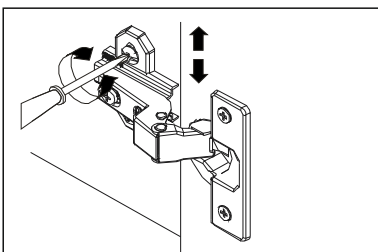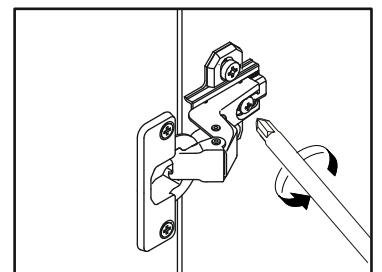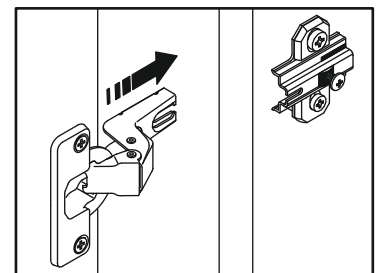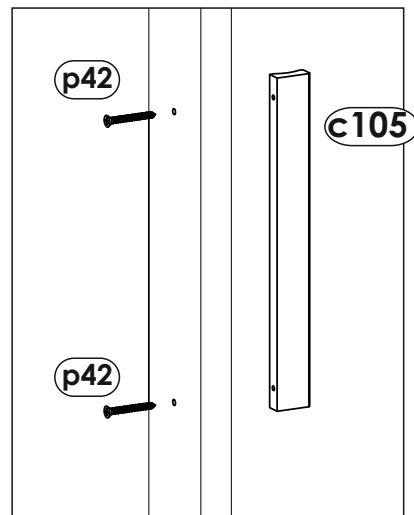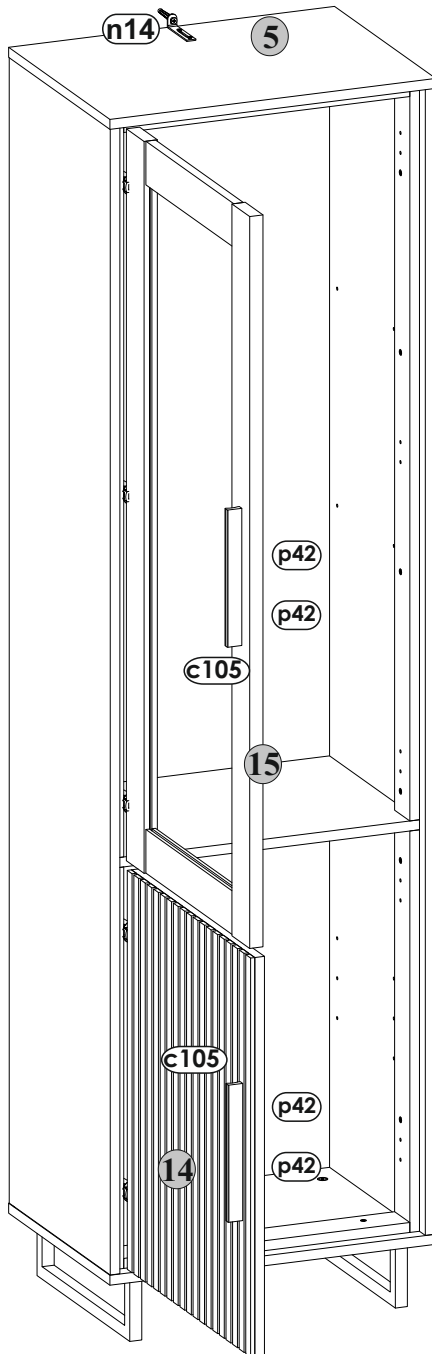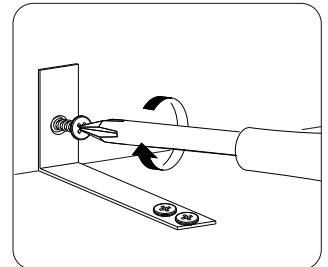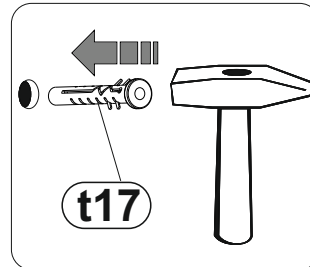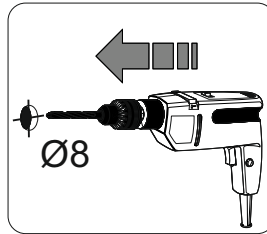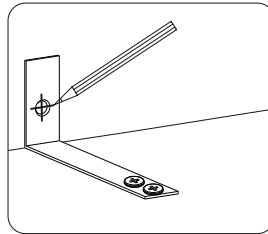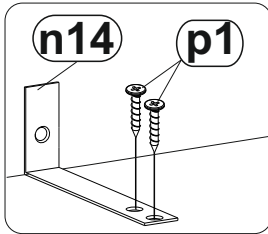

9

